



MonoEquip.com

# MONO Harmony Deck Oven

EN

## Installation and Operation Manual



### Product Version

- USA specification
- Modular decks
- ECO Touch control

### Enter Serial Nos. here.

|                    |                      |
|--------------------|----------------------|
| Deck 1             | <input type="text"/> |
| Deck 2             | <input type="text"/> |
| Deck 3             | <input type="text"/> |
| Deck 4             | <input type="text"/> |
| Deck 5             | <input type="text"/> |
| Fan<br>(If fitted) | <input type="text"/> |

In the event of an enquiry please quote these serial numbers.



### ECO Touch control

# Warning and information labels



Warning label, to reduce risk of fire or electric shock. Do not remove the cover (or back). No user serviceable parts inside. Repair should be done by authorized personnel only.



Warning label, to warn of hot surfaces.



Light replacement power warning.



Multiple Supply Cord Information.

# Safety Symbols

The following safety symbols are used throughout this product manual. Before using your new equipment, read the instructions carefully and pay special attention to the information marked with the following symbols:

**DANGER**

Indicates an immediate hazard with a high risk of death or serious physical injury if not avoided.

**WARNING**

Indicates a potential hazard with a medium risk that could result in death or serious physical injury if not avoided.

**CAUTION**

Indicates a hazardous situation that could result in minor or moderate injury if not avoided.

# Electrical Safety Notice



## Electrical safety and advice regarding supplementary electrical protection

Commercial kitchens and food service areas are environments where electrical appliances may be located close to liquids, operate in and around damp conditions or where restricted movement for installation and service is evident.

The appliance installation and periodic inspection should only be undertaken by a qualified, skilled, and competent electrician and connected to the correct power supply suitable for the load as stipulated by the appliance data label.

The electrical installation and connections should meet the mandatory requirements of the local electrical wiring regulations and any safety guidelines.

### We recommend:

- Supplementary electrical protection with the use of a residual current device (RCD)
- Fixed wiring appliances should also incorporate a locally situated switch disconnector to connect to, which is easily accessible for switching off and safe isolation purposes. The switch disconnector must meet the specification requirements of IEC 60947.

### Your attention is drawn to the following:

#### BS 7671:2018 – Guidance Note 8 – 8.13: Other locations of increased safety risk

It is recognized that there may be locations of increased risk of electrical shock other than those specifically addressed in Part 7 of BS 7671. Examples of such locations could include laundries, where washing and drying machines are nearby, and water is present, and commercial kitchens with stainless steel units where, once again, water is present. Where, because of the perception of additional risks being likely, the installation designer decides that an installation or location warrants further protective measures, the options available include:

- Automatic Disconnection of Supply (ADS) using a residual current device having a residual operating current not exceeding 30 mA;
- Supplementary protective equipotential bonding; and
- Reduction of maximum fault clearance time.

The provision of RCDs and supplementary bonding must be specified by the host organization's appointed installation designer or electrical contractor and installed by a suitably qualified and competent electrician to comply with Regulations 419.2 and 544.2.



### WARNING

- The supply to this machine must be protected by a 30mA-rated Type 'A' Residual Current Device (RCD).
  - Before installation, it is recommended that a qualified and competent electrician first tests the electrical outlet for electrical safety.
-

# Water Leak Safety Notice

---

**WARNING**

- **Take action immediately to get a water leak fixed and prevent death or serious injury from electrocution.**
- 

It is essential to regularly check for any signs of a water leak from an oven installation. If there is evidence of a water leak, do not ignore it. Immediately report it to a manager or as applicable to your organization.

Furthermore:

- Disconnect or completely isolate the oven from the electrical supply (see **Emergency Instructions** section on page **20**).
- Place an out-of-service notice on the oven.
- Contact your oven supplier or MONO Equipment for technical assistance.

Ovens must be maintained and serviced at appropriate intervals to ensure the oven operates at optimum levels. See the **Maintenance** section on page **65**.

# General Notices

---

**CAUTION****■ Users with Implantable Cardioverter Defibrillators and Pacemakers**

- Several common types of devices and machinery may interfere with implantable cardioverter defibrillators (ICDs) and pacemakers, including mobile phones, headphones, radios, machinery, and magnets.
  - The electromagnetic waves generated by these devices can keep your ICD or pacemaker from functioning correctly. Try to avoid them, or at least minimize your exposure to them.
  - Your healthcare professional can advise you about specific devices and machinery to avoid.
- 

**NOTICES****■ Warranty information**

- Ambient working temperatures for electrical components, such as solenoid switches, circuit breakers and motors, should not exceed 40 °C (115 °F). Manufacturers of these, and other electrical components, advise that any ambient temperature above this affects the functionality of the components. Any related guarantees become void.
- It is the owners' responsibility to ensure adequate ventilation is provided. Any component malfunctioning during the guarantee period found to have been subjected to excessive humidity or ambient working temperatures is not covered by the component manufacturers or MONO Equipment's product warranty.
- Failure to adhere to the cleaning and maintenance instructions detailed in this User Manual also could affect the warranty of this machine.
- Visit the [MONO Parts and Labour Warranty page](#) for further information.

**■ Continuous improvements**

- Our policy is to improve our machines continuously, and we reserve the right to change specifications without prior notice.

**■ Engineers/Electricians-only sections of the User Manual**

- Technical sections of this User Manual are for suitably experienced and qualified persons (SEQP) only. Customers must never make any modifications or repairs to MONO's machines.
-



## DECLARATION OF CONFORMITY

We hereby declare that this machine complies with the essential health and safety requirements of :-

- The Machinery Directive 2006 / 42 / EC
- The Low voltage Directive 2006 / 95 / EC
- The requirements of the Electromagnetic Compatibility Directive 2004 / 108EC, 91 / 263 / EEC, 92 / 31 / EEC
- The General Safety of Machinery and food processing Standards applicable
- Materials and Articles intended to come into contact with food - Regulation (EC) No. 1935 / 2004
- Good manufacturing practice for Materials intended to come into contact with food - Regulation (EC) No. 2023 / 2006

|   |  |
|---|--|
| <b>Signed</b>   |  |
| <b>D. Osmundsen – Quality and Conformance Manager</b> |  |

|             |  |
|-------------|--|
| <b>Date</b> |  |
|-------------|--|

|                         |  |                           |  |
|-------------------------|--|---------------------------|--|
| <b>Machine FG Code.</b> |  | <b>Machine Serial No.</b> |  |
|-------------------------|--|---------------------------|--|

A technical construction file for this machine is retained at the following address:

**MONO EQUIPMENT**  
 Queensway,  
 Swansea West Industrial Park,  
 Swansea  
 SA5 4EB  
 UK

**MONO EQUIPMENT** is a business name of **AFE GROUP Ltd**  
 Registered in England No.3872673    VAT registration No.923428136

Registered office: Unit 35,  
 Bryggen Road,  
 North Lynn Industrial Estate,  
 Kings Lynn Norfolk,  
 PE30 2HZ

# Contents

|   | Page      |
|---|-----------|
| <b>1. Introduction</b> .....                                  | <b>10</b> |
| <b>2. Overall Dimensions</b> .....                            | <b>11</b> |
| <b>3. Specifications</b> .....                                | <b>12</b> |
| Electrical specifications .....                               | 12        |
| Environmental specifications .....                            | 12        |
| Mechanical specifications .....                               | 13        |
| Deck oven dimensions .....                                    | 14        |
| <b>4. Safety</b> .....  | <b>17</b> |
| General safety messages .....                                 | 17        |
| Oven safety messages .....                                    | 17        |
| Emergency instructions .....                                  | 19        |
| <b>5. Installation</b> .....                                  | <b>20</b> |
| General .....   | 20        |
| Electrical connections .....                                  | 20        |
| Fit earth straps (part no. 158-25-11200) .....                | 20        |
| Fit the tile retaining brackets (part no. 257-06-00015) ..... | 21        |
| Water supply requirements .....                               | 21        |
| Water system setup procedure .....                            | 22        |
| Exhaust Connections (if canopy fitted) .....                  | 23        |
| <b>6. Before First Use of the Oven</b> .....                  | <b>25</b> |
| Operating conditions .....                                    | 25        |
| Baking tile ‘seasoning’ instructions .....                    | 25        |
| Baking principles .....                                       | 27        |
| <b>7. Touchscreen Operation</b> .....                         | <b>29</b> |
| Basic operation .....   | 30        |
| Baking using the “Favourites” menu .....                      | 31        |
| Baking using the “Manual Bake” menu .....                     | 34        |
| Baking using the “Programmes” menu .....                      | 37        |
| Creating a program .....                                      | 40        |
| 7-Day timer .....   | 47        |
| Settings .....  | 48        |
| <b>8. Using the USB Port</b> .....                            | <b>54</b> |
| <b>9. Diagnostics</b> .....                                   | <b>58</b> |
| <b>10. Passcodes</b> .....                                    | <b>59</b> |



- 11. Cleaning ..... 61**
  - Daily cleaning instructions..... 61
  - Weekly cleaning instructions..... 61
- 12. Troubleshooting ..... 62**
- 13. Service ..... 63**
  - Oven spares ..... 63
  - Service Information..... 64
  - Disposal..... 64
- 14. Maintenance..... 65**
  - General maintenance ..... 65
  - Light bulb replacement..... 65
- 15. Oven Electrics ..... 67**
  - Electrical drawings..... 73
  - Electrical panel main components ..... 80
- 16. Location of Warning and Information Labels ..... 85**

# 1. Introduction

The electric modular Deck Oven is an easy-to-use practical, good-looking oven, giving an excellent heat recovery rate and an even bake across a wide range of bread and confectionery products.

- **Good looking and completely reliable**

Conceived with the no-nonsense requirements of both the independent and in-store baker in mind, designed to be visually pleasing and give reliable service for many years visually. This oven will more than satisfy the most discerning customer.

- **Top-quality specification**


The external and internal contact surfaces are stainless steel.

Each modular deck has one or more durable reinforced tiles, high-grade insulation, and high-temperature ceramic sealant to make the oven more efficient.

The oven comes with a patented integral steaming system, which reduces energy consumption and the overall size of the oven. The system produces natural steam with the advantages of spray steam. Pre-steam is also available to reduce the effects of long loading times.

No drainage is required.

Eco-touch ovens are supplied with **TOUCH** displays for user-friendly control panels. The displays can show pictures of product types or program numbers to meet the bakery’s requirements. When not being used, the screen can show a company logo. A voice-prompt facility is also available for basic instructions such as “Bake over”.

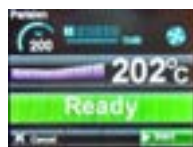

ECOTOUCH  
SCREEN  
CONTROLS




The lights are low voltage, sealed from the chamber and easily accessed from outside the oven.

Fitted with a choice of hinged easy to clean glazed doors (using low energy-loss reflective glass for high visibility) or metal doors, means low energy consumption and the high kW rating gives good recovery. (0-100% heating available both top and bottom).

**As it is our policy to improve our machines continuously, we reserve the right to change specifications without prior notice.**

## 2. Overall Dimensions

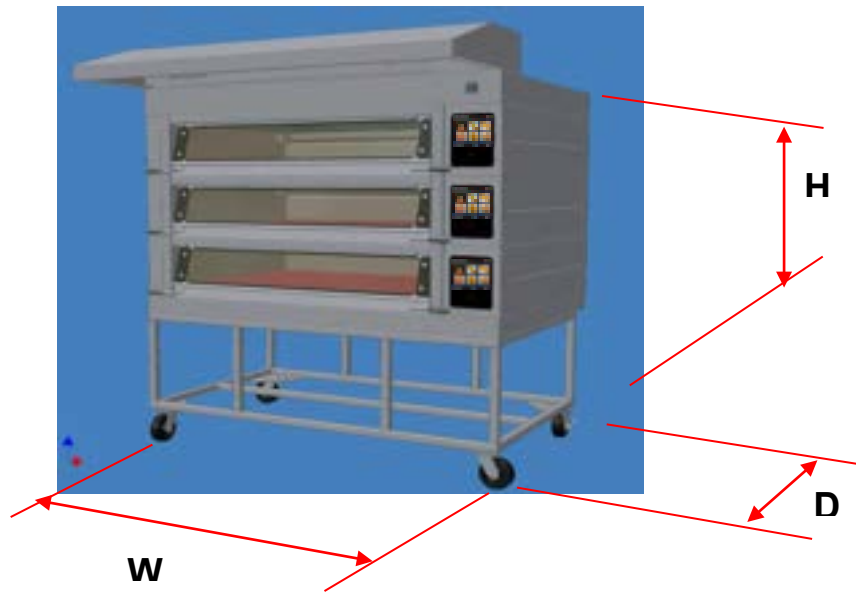

**NOTE**

■ All dimensions are approximate and do not include the optional canopy (see pages 23 and 24).

### Overall dimensions

| Specification                   | 1-tray wide       | 2-trays wide      | 3-trays wide      | 4-trays wide     |
|---------------------------------|-------------------|-------------------|-------------------|------------------|
| Width                           | 955 mm (37½ in.)  | 1416 mm (55¾ in.) | 1890 mm (74½ in.) | 2365 mm (93 in.) |
| Depth                           | 1312 mm (51½ in.) |                   |                   |                  |
| Height (2 decks) <sup>(1)</sup> | 2020 mm (79½ in.) |                   |                   |                  |
| Height (3 decks) <sup>(1)</sup> | 2020 mm (79½ in.) |                   |                   |                  |
| Height (4 decks) <sup>(1)</sup> | 2020 mm (79½ in.) |                   |                   |                  |
| Height (5 decks) <sup>(1)</sup> | 2140 mm (84¼ in.) |                   |                   |                  |

<sup>(1)</sup> Including the base and top finishing. See pages 14 and 15 for dimensional diagrams.

# 3. Specifications

## Electrical specifications



- WARNING**
- An electrical socket must be protected by a 30mA-rated Type ‘A’ Residual Current Device (RCD) before installation and commissioning of the oven.
  - Always fit a wall mounted isolator switch to isolate the oven from the electrical supply completely. The isolator must be visible, clearly labelled, and easily accessible by an operator.
  - Always check the electrical ratings on the nameplate before connecting power.

The electrical loadings in [Table 1](#) and [Table 2](#) are for an individual deck module, not the complete oven.

**Table 1:** Electrical loading per standard-sized modular deck

| Supply                                    | 3-trays wide      | 2-trays wide    | 1-tray wide    |
|---|-------------------|-----------------|----------------|
| 3 phase (3 wires+ground), 220 Vac (60 Hz) | 8.85 kW, 24 Amp   | 5.93 kW, 18 Amp | 3.0 kW, 9 Amp  |
| 3 phase (3 wires+ground), 208 Vac (60 Hz) | 7.90kW, 22 Amp    | 5.31 kW, 17 Amp | 2.7 kW, 8.7Amp |
| 3 phase (3 wires+ground), 480 Vac (60 Hz) | 8.78 kW, 12.4 Amp | 5.86 kW, 8.2 A. | 4.9 kW, 7 Amp  |

**Table 2:** Overload protection for each modular deck

| Overload protection | 3 trays-wide | 2 trays-wide | 1-tray wide  |
|---------------------|--------------|--------------|--------------|
| Each modular deck   | 20 Amps      | 20 Amps      | Contact MONO |



- NOTE**
- Whenever connecting power to the oven, eight minutes must elapse before the oven’s steam function can be used. The bottom elements require enough time to heat up for steaming. This waiting time applies even if the power is disconnected and connected again, and the oven is still hot.

## Environmental specifications

The noise level is less than 80 dB.

## Mechanical specifications


**Table 3:** Weights for standard-size deck oven

| Specification                            | Nominal trays wide | Modular decks | Weight <sup>(1)</sup> |       |
|--|--------------------|---------------|-----------------------|-------|
|  |                    |               | Lbs                   | Kg    |
| Total oven weight (including base frame) | 4                  | 3             | (1)                   | (1)   |
|  | 3                  | 3             | 2345                  | 1064  |
|  | 2                  | 3             | 1569                  | 711   |
|  | 1                  | 3             | (1)                   | (1)   |
| Weight per oven chamber module           | 4                  | -             | (1)                   | (1)   |
|  | 3                  | -             | 575                   | 261   |
|  | 2                  | -             | 421                   | 191.5 |
|  | 1                  | -             | (1)                   | (1)   |
| Weight per oven canopy module            | 4                  | -             | (1)                   | (1)   |
|  | 3                  | -             | 38                    | 17    |
|  | 2                  | -             | 31                    | 14    |
|  | 1                  | -             | (1)                   | (1)   |
| Weight per fan module                    | 4                  | -             | (1)                   | (1)   |
|  | 3                  | -             | 62                    | 28    |
|  | 2                  | -             | 62                    | 28    |
|  | 1                  | -             | (1)                   | (1)   |
| Weight of product (maximum) per deck     | 4                  | -             | (1)                   | (1)   |
|  | 3                  | -             | 131                   | 60    |
|  | 2                  | -             | 86                    | 39    |
|  | 1                  | -             | (1)                   | (1)   |

(1) To be advised. Contact MONO Equipment for information.


(2) All weights are approximate.

# Deck oven dimensions

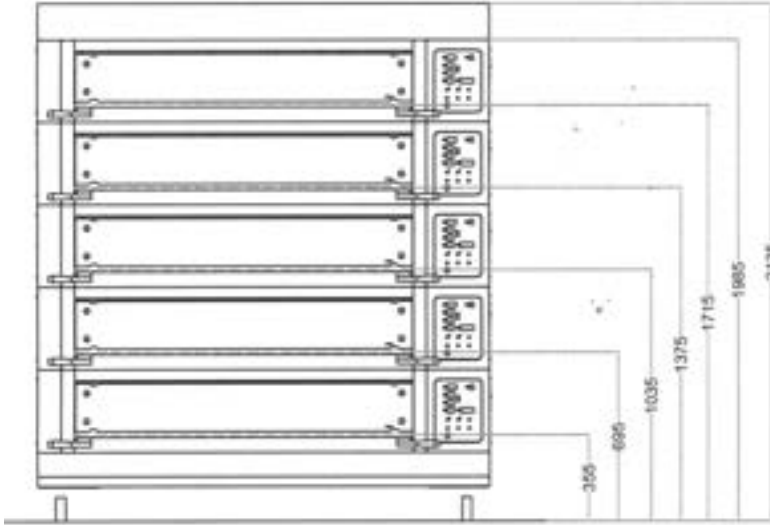



**5 DECK OVEN  
DECK PLATE HEIGHTS**

**4 DECK OVEN  
DECK PLATE HEIGHTS**

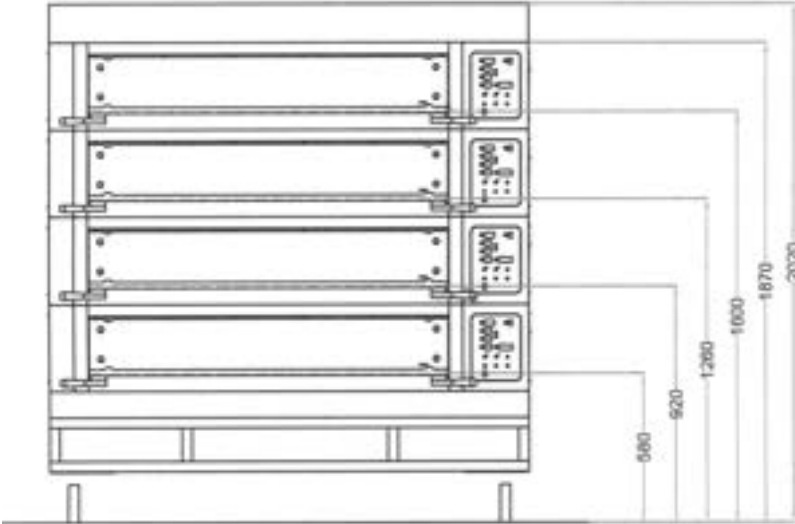

**3 DECK OVEN  
DECK PLATE HEIGHTS**

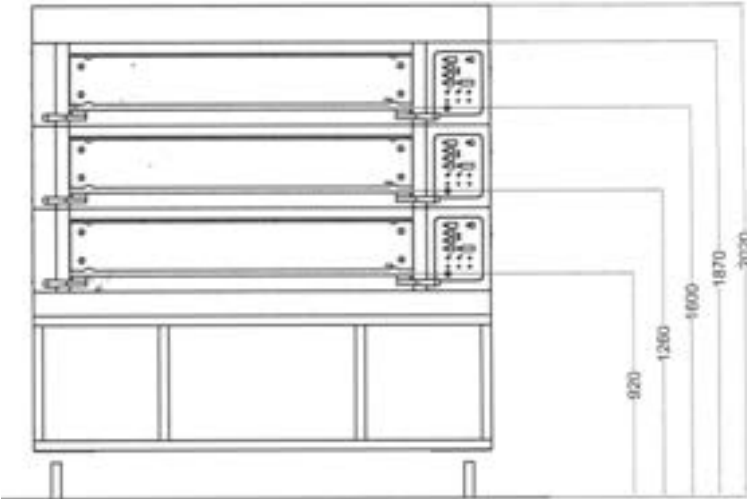

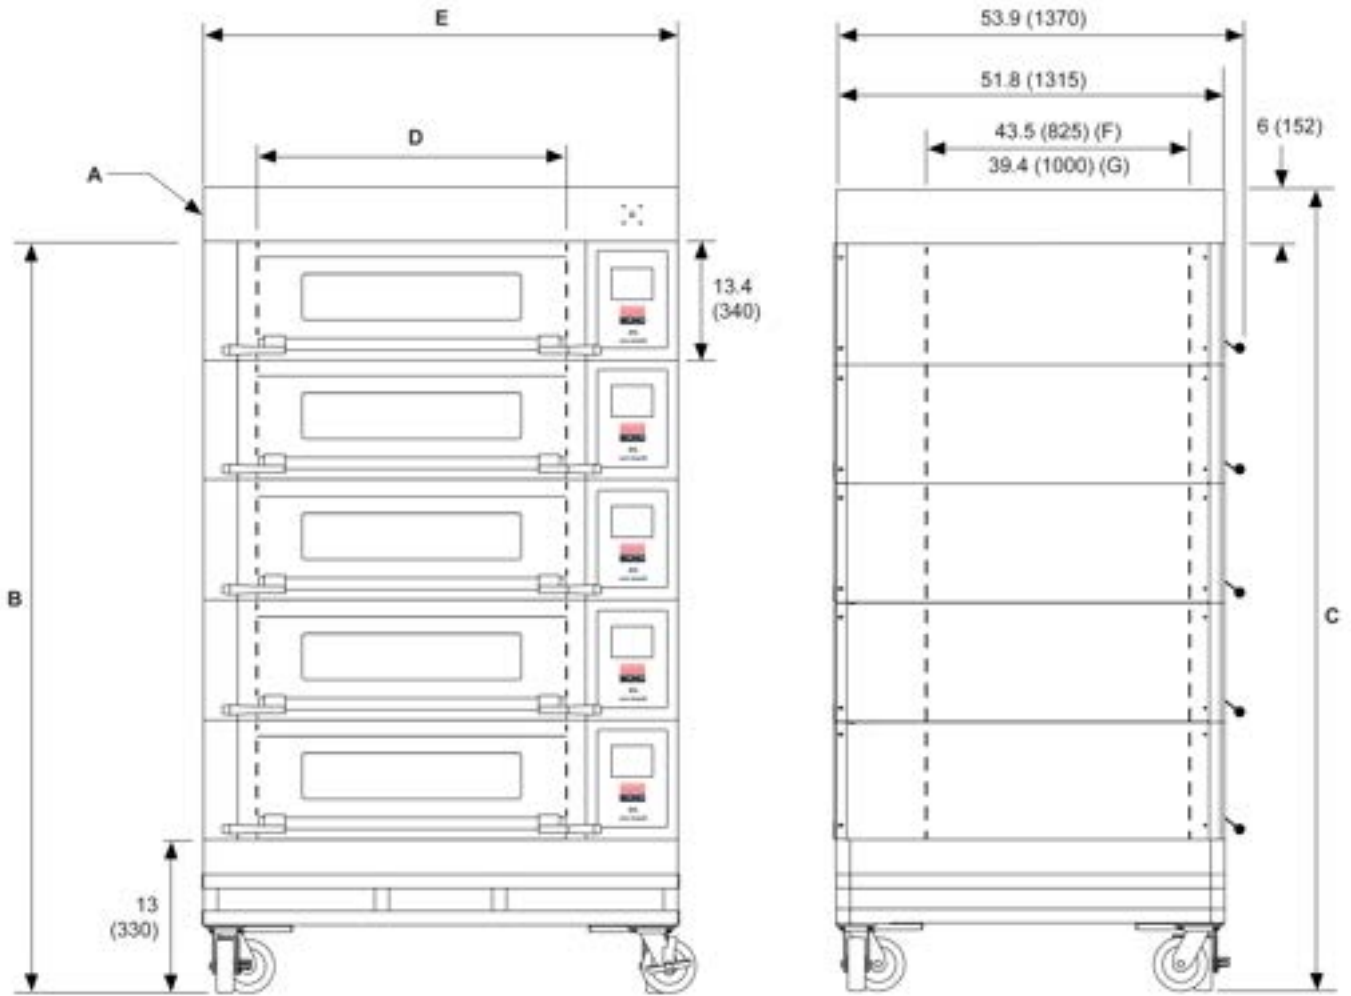

- A. Top valence or extractor hood (to customer specifications)
- B. 5-deck: 78.2 in. (1985 mm); 4-deck and 3-deck: 73.6 (1870 mm)
- C. 5-deck: 78.2 in. (2135 mm); 4-deck and 3-deck: 73.6 (2020 mm)
- D. Baking chamber width – see [Table 5](#) on page 16
- E. Overall deck width – See [Table 6](#) on page 16
- F. Baking tiles – See [Table 7](#) on page 16
- G. Chamber

**Table 4:** Internal usable surface areas and number of trays per deck

| Nominal trays wide | Internal usable surface area (per deck) | Number of trays (per deck) |                 |
|--------------------|---|----------------------------|-----------------|
|                    |   | ft <sup>2</sup>            | 18 in. x 30 in. |
| 3                  | 12.5 ft <sup>2</sup>                    | 3                          | 3               |
| 2                  | 8.28 ft <sup>2</sup>                    | 2                          | 2               |
| 1                  | 4.2 ft <sup>2</sup>                     | 1                          | 1               |

**Table 5:** Baking chamber widths

| Number of trays | Chamber width |        |
|-----------------|---------------|--------|
|                 | mm            | inches |
| 1               | 483           | 19     |
| 2               | 950           | 37     |
| 3               | 1420          | 56     |

**Table 6:** Overall deck widths

| Number of trays | Deck width |        |
|-----------------|------------|--------|
|                 | mm         | inches |
| 1               | 955        | 37½    |
| 2               | 1416       | 55¾    |
| 3               | 1890       | 74½    |

**Table 7:** Baking tiles

| Number of trays | Number of baking tiles (pieces) |
|-----------------|---------------------------------|
| 1               | 1                               |
| 2               | 1                               |
| 3               | 1                               |

**NOTE**

■ See pages **23** and **24** for canopy dimensions.



## 4. Safety

### General safety messages

---

**CAUTION****■ Magnets information:**

- Magnetic fields in magnets, used in devices and machinery, can inhibit pulse generators for Implantable Cardioverter Defibrillators (ICDs) and pacemakers. Magnets can activate a switch prohibiting the ICD from delivering vital signals such as lifesaving shocks.
  - If you have an ICD or pacemaker, avoiding close or prolonged contact with magnets or their magnetic fields is advisable. Keep magnets at least six inches from where your device is implanted. **If you feel any interference in any way, immediately move away from the source.**
- 

### Oven safety messages

Only fully trained and authorized persons are permitted to work on the oven. Qualified electricians must carry out all repairs and maintenance. Always disconnect or isolate the power supply before starting maintenance or cleaning work on the oven.

A responsible Bakery Manager or Supervisor must carry out daily safety checks. Bakery staff **must not**, under any circumstances, remove covers or panels to access any part of the oven.

---

**DANGER**

- Never use the USB port to power or recharge electronic devices, e.g. mobile phones. Incorrect usage causes damage to the oven and could result in a fire.
- 

**WARNING****■ Before using the oven:**

- Ensure all covers, panels, cables, and pipe fittings are secure.
  - Visually examine the oven for apparent damage or signs of tampering.
  - If the oven is damaged or malfunctioning, or missing parts:
    - Stop using it.
    - Do not attempt any repairs.
    - Contact MONO Equipment for technical assistance.
  - Never operate the oven with any covers or panels removed.
  - All utility connections to the oven must comply with the statutory requirements of the country where the oven is installed.
  - Ensure this product manual is read thoroughly before operating the oven. Operate and maintain the oven only as described in this product manual.
-

**WARNING**

- An electrical socket must be protected by a 30mA-rated Type 'A' Residual Current Device (RCD) before installation and commissioning of the oven.
  - Always fit a wall-mountable isolator switch to isolate the oven entirely from the electrical supply in an emergency. The isolator must be visible, labelled as an emergency shutdown device, and easily accessible.
  - Check that the electrical requirements on the oven's information plate match the supply before connecting the power cable and turning the power on for the first time.
  - Before installation, it is recommended that a qualified and competent electrician first tests the electrical outlet for electrical safety.
  - Always ensure your hands are dry before touching any electrical components, including cables, switches, and plugs.
- 

**CAUTION**


- Be aware of hot surfaces:
    - Do not touch the oven door with bare skin.
    - Always use oven gloves when loading or unloading the oven.
    - Allow time for the oven to cool down before cleaning it.
    - While the oven is in operation (and for some time after use), touching the oven door or the surrounding panels is inadvisable because of conducted heat.
  - When removing products from the oven, ensure the following:
    - Tins are knocked out and stored directly onto a tin storage trolley or rack. Do not leave hot tins on the floor or tables.
    - Trays are put into a rack and then wheeled to a safe cooling area.
  - Fully train operatives before they use the oven. Anyone undergoing training must be under the direct supervision of someone experienced.
  - Ensure there are no trip hazards around the oven, e.g. trailing cables.
  - Check that the floor around the oven is not slippery, e.g. no liquid spills.
  - Do not store items on top of or behind the oven.
  - Never climb onto the roof of the oven.
  - Only use the oven for baking bread, pastries, and cakes. Contact MONO Equipment for other product-baking machines.
  - No unauthorized modifications to the oven are permitted.
-

# Emergency instructions

**To stop the oven in an emergency, switch it off using the main isolator on the oven.**

A wall-mounted isolator, rated for the specific model of oven installed, must be available to isolate the oven in an emergency completely. The isolator must be accessible and known to the oven operator.

**Figure 1: Main isolator switch on the oven**

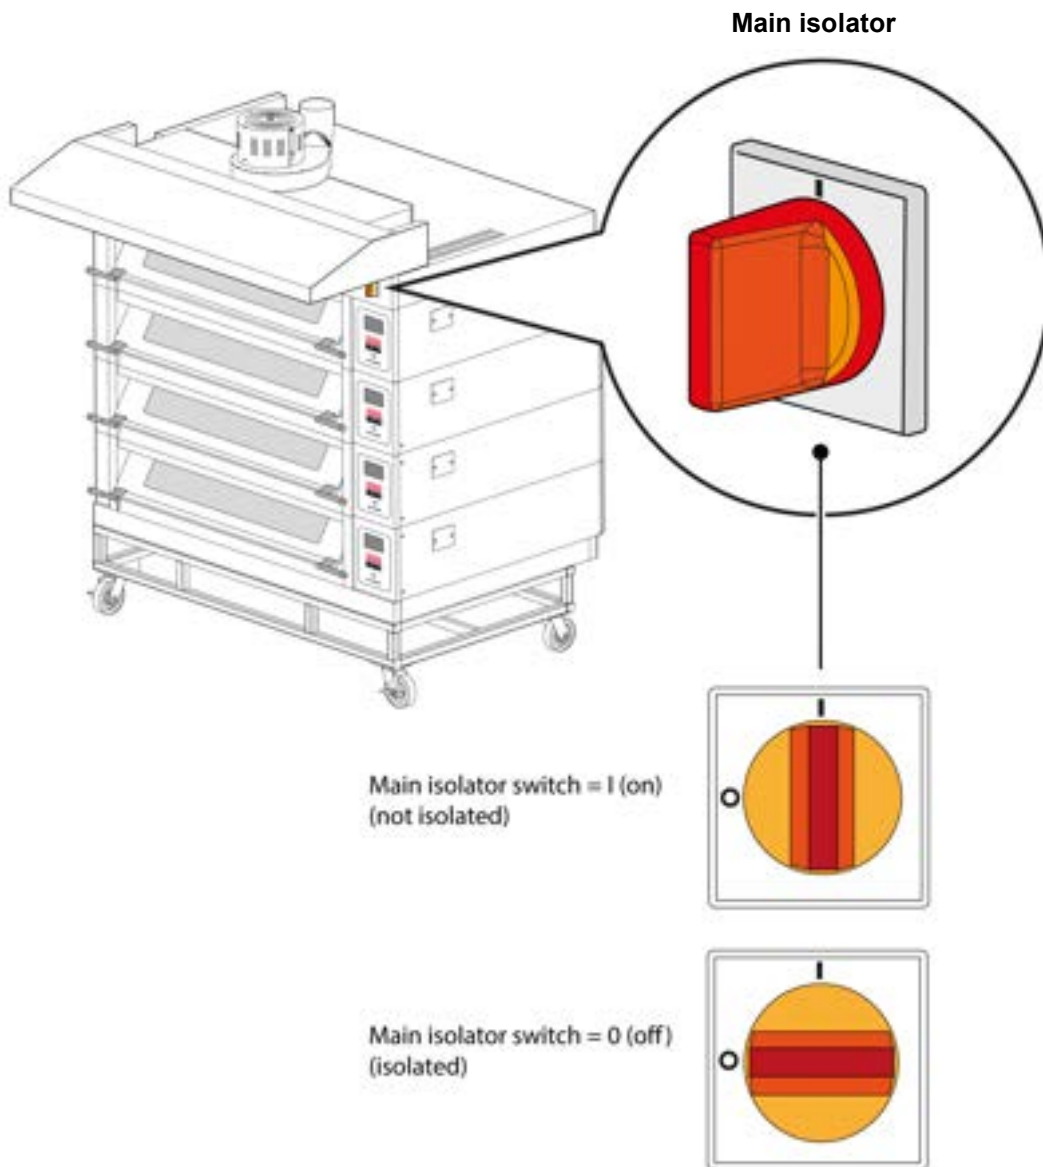

# 5. Installation

## General

- A solid, smooth, level floor is recommended on which to position the oven, and access for maintenance should be considered.  
The oven is not designed to be a “built-in” design. Sufficient clearance must be left in front of the access panels (right-hand side) for servicing.
- If not chosen as an oven option, an extraction hood should be sited above the oven to disperse excess steam and heat, which could adversely affect the bakery ceiling and ambient temperature.
- A chain retainer, shorter than the power cables, should be fitted to protect them from strain if the oven moves. Fit it to the wall or floor and the base, using the hole in the castor fixing corner plates.
- Only trained engineers are authorized to install this oven. All water and electrical connections must comply with local and national regulations.

## Electrical connections


- The main connection point for all deck supplies is at the top of the oven.
- A wall isolator must be available to isolate the oven completely. This isolator must be easily accessible to the oven operator.
- Read the **Safety** section on page 17.
- Electrical loadings are in the **Specifications** section on page 12.

## Fit earth straps (part no. 158-25-11200)



**NOTE** ■ Factory-built ovens already have them fitted, but always check that they are fitted.

**Figure 2:** Connect earth (ground) straps between each modular deck

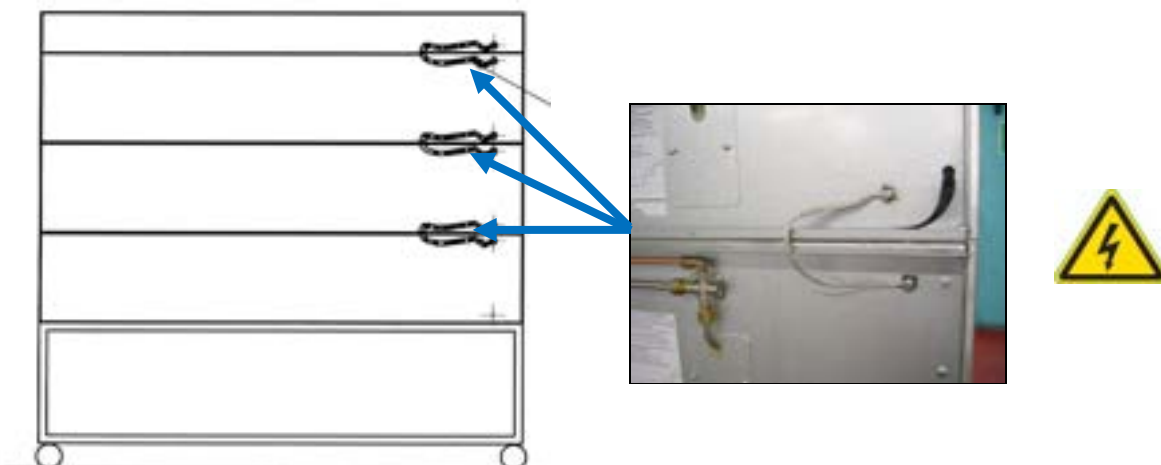

# Fit the tile retaining brackets (part no. 257-06-00015)



**NOTE**

- Only deck ovens built on-site need this procedure, but always check that they are fitted.

**Procedure**

1. Find the brackets and screws loose in a supplied plastic bag.
2. Position the bracket to touch the tile (as shown in the photograph)
3. Fix the bracket using two screws.
4. Repeat steps 1 to 3 for both sides of each deck.

**Figure 3:** Installing the tile retaining brackets



Retaining brackets in two positions on each deck



Positioning of bracket

## Water supply requirements



**NOTE**

- The setup procedure on the next page must be followed to allow the steaming system to function correctly.

- All ovens with steam require a 1/2-inch NPT connection to a hot or cold water supply at a pressure of 29 to 44 psi (2 to 3 bar). The connector is located approximately 9.8 in. (250 mm) from the right and 3.9 in. (100 mm) from the top of the stand when facing the front of the oven.
- Only one water supply is required per oven and must comply with local water regulations.
- All decks are supplied from one connection point on the rear of the oven.
- For proper operation of the steam system, it is recommended that the water supply has the following specifications:

|                               |                             |
|-------------------------------|-----------------------------|
| <b>Hardness</b>               | 0 to 4 grains per US gallon |
| <b>PH range</b>               | 7.0 to 8.5                  |
| <b>Chloride concentration</b> | 0 to 20 ppm                 |

**Consult your water treatment company for proper water filtration system information.**

- No drain is required for this oven.
- A non-return check valve is fitted to the water inlet manifold.

## Water system setup procedure




It is imperative that the water delivery to the deck oven is checked for the steam system to operate correctly.

Note that dynamic pressure, not static pressure, is being measured.

### Procedure

1. Flush out the main feed pipe to be used until water runs clear and free from debris.
2. Connect the main feed to the oven.
3. Connect flexible hoses to each deck.
4. Place a container under the test valve **(B)**.
5. Slowly open test valve **(B)** fully and, with the water flowing, set the regulator **(C)** to 0.75 bar using the screw underneath **(D)**.
  - Never use the oven above this setting.
6. When the pressure has stabilised, shut the test valve **(B)**.
7. Repeat steps 4 to 6 at the end of the installation.

**Figure 4:** Water regulator setup (located on rear of oven)

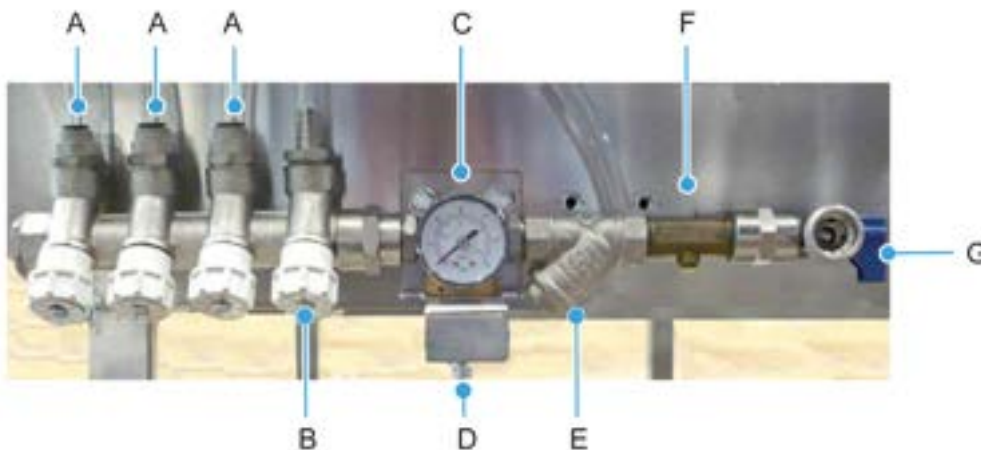


- 
- A. To ovens
  - B. Test valve
  - C. Regulator
  - D. Adjusting screw to 11 psi (0.75 bar)
  - E. Filter
  - F. Dual check valve backflow prevention device
  - G. Stop tap
-

## Exhaust Connections (if canopy fitted)


- Ideally an exhaust duct should rise 78¾ inches (2 metres) above the bakery roof and be protected from wind and birds by a duct protector.
- It should be of a suitable material to take the high temperatures and humidity expected.
- It should be flexible and easily removable at the oven connection point.  
*This allows the oven to be moved for cleaning when required.*

**Figure 5:** Canopy (without fan) dimensions

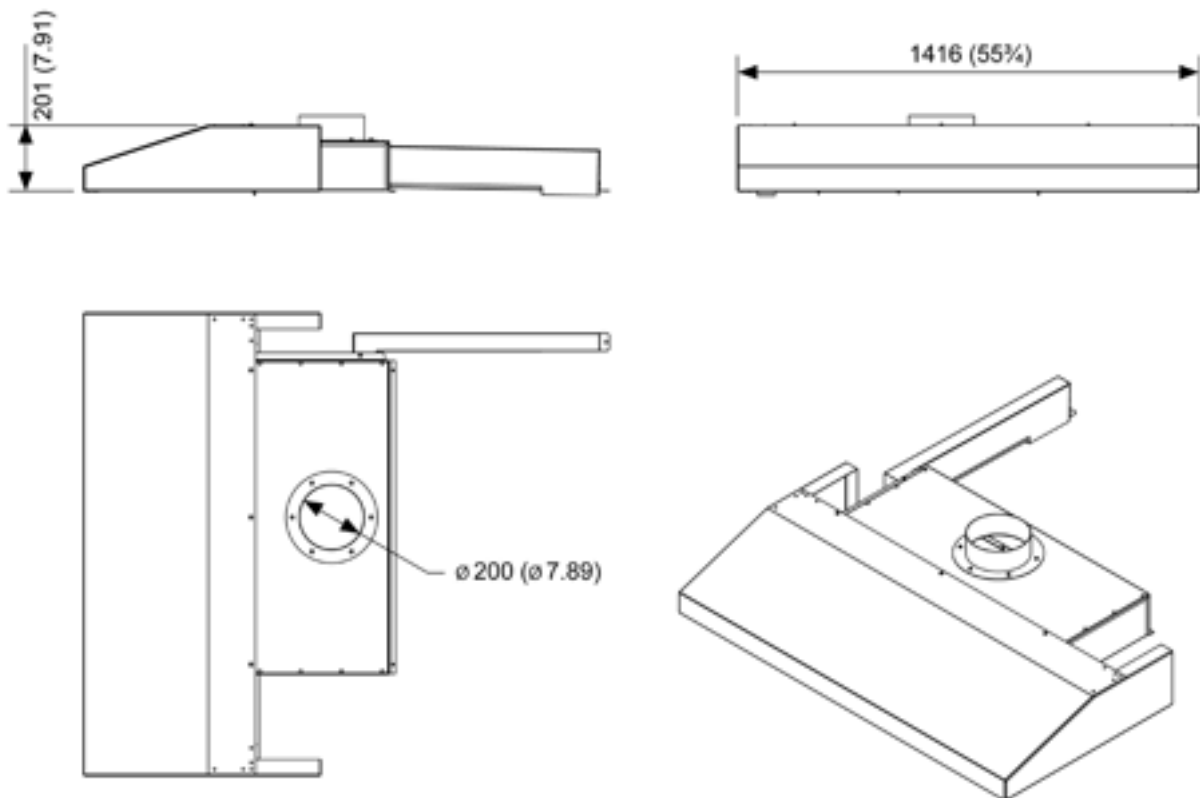

Dimensions are in mm (inches)

**Figure 6:** Canopy (with fan) dimensions

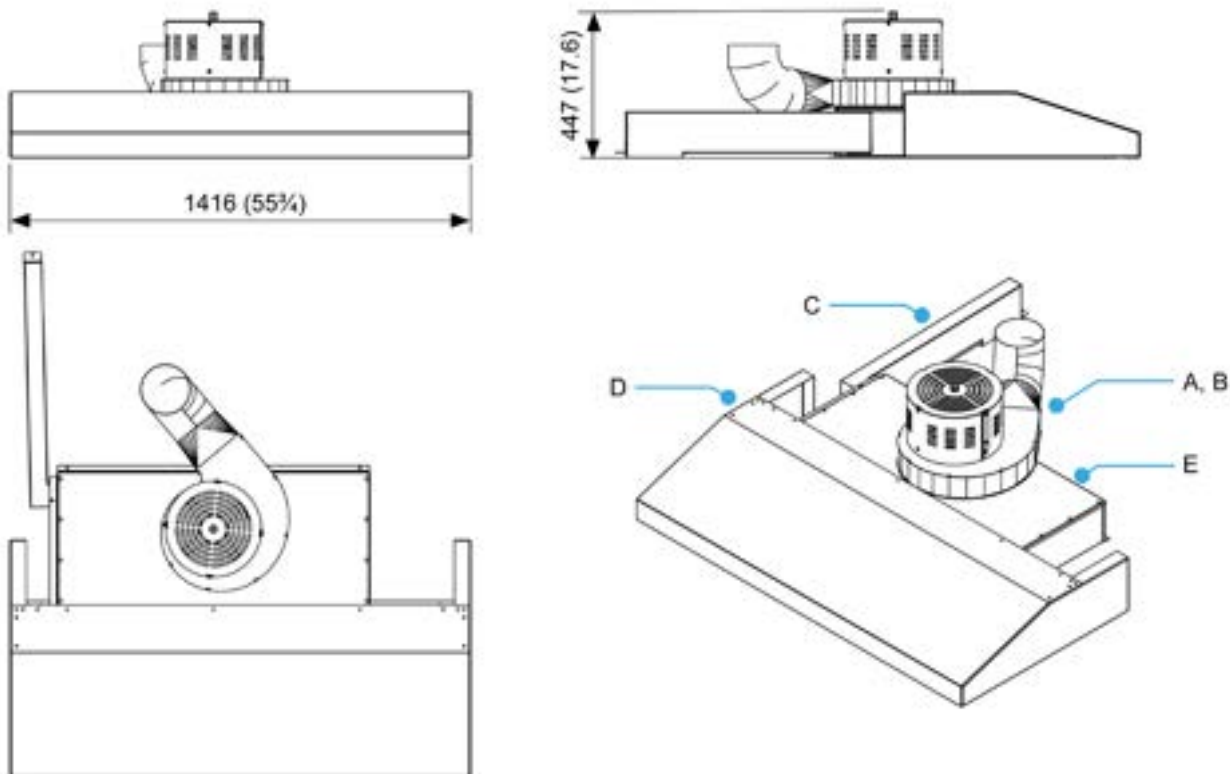

Dimensions are in mm (inches)

**Table 8:** Canopy parts

| Item             |  | Part number  |
|------------------|--|--------------|
| A                | Extraction fan assembly                        | 247-08-04900 |
| B                | Inlet ring                                     | 247-08-05100 |
| C                | Flue assembly                                  | 257-10-00010 |
| D                | Canopy assembly                                | 257-10-00016 |
| E <sup>(1)</sup> | Extraction duct assembly for 2-tray oven width | 257-10-00022 |

<sup>(1)</sup> Contact MONO Equipment for the availability of other extraction duct assemblies.



# 6. Before the first use of the Deck Oven

## Operating conditions

- Leave a clear space of at least 6 to 10 ft. (2 to 3 metres) in front of the oven for practical and safety reasons.
- Do not use bakery utensils to operate the control panel buttons.
- Ensure that the locking casters are locked into position.
- For hygiene reasons, MONO Equipment highly recommends thoroughly wiping the inside of the oven and all accessories with a clean cloth soaked in warm soapy water before using the oven for the first time. Although the utmost care is taken during assembly and pre-delivery inspection, there is always a possibility of residue contaminating the first bake if this is not done.

## Baking tile ‘seasoning’ instructions

**THIS PROCEDURE MUST BE FOLLOWED FOR THE OVEN’S WARRANTY TO REMAIN VALID.**

For the oven to give good, reliable service, the deck tiles must initially be brought up to temperature as stated below; this ensures all residual moisture in the tiles has been removed.

This procedure must be actioned **once** before the deck oven is used for the first time. After the tile seasoning procedure has been run, the oven can be used as required.

### Tile seasoning procedure


1. From the Main Menu, select the **Settings** icon.




2. Enter the default password **123456** (unless changed) and touch **OK**.



3. Select the **High Level Settings** option.

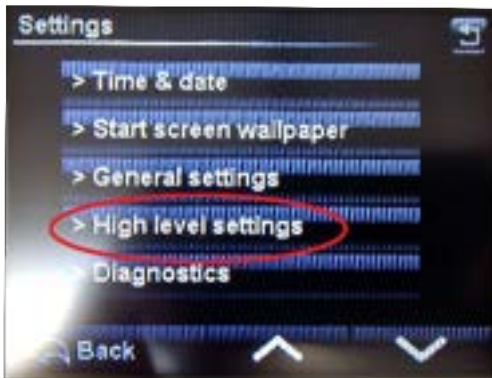

4. Enter the default password **561234** (unless changed) and touch **OK**.
5. Select the **Tile Seasoning** option to start running the seasoning program automatically.

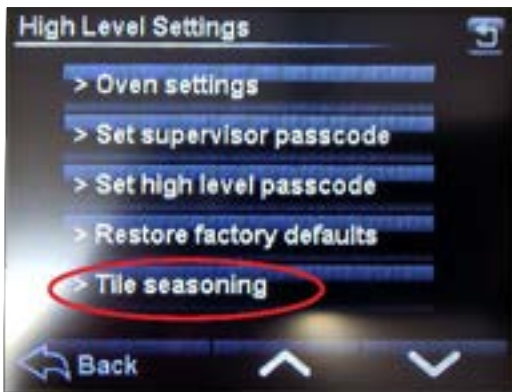

6. The oven's controller shows the **Target Temperature** and the **Remaining Process Time**.



The oven now follows the **Tile Seasoning Temperature** rise over the time shown on the screen, with the damper opening and closing periodically during the process.

7. Wait until the oven returns to the standard wallpaper **Standby** screen at the end of the program.
8. The tile seasoning is complete, and the deck oven can be used for baking.



**NOTE**

- To stop the tile seasoning procedure, cycle the deck oven off and then on using the main isolator switch.
- The deck oven reverts to standby mode when power is restored.

# Baking principles

**NOTE**

- Operators should refer to their company's recipe manual for the oven temperature settings.

## Baking heat

Products bake in an insulated, heated chamber with the temperature regulated by a thermocouple. A digital temperature read-out is visible on the control panel screen. Baking heat is radiant, with top and bottom heat adjustable by separate controls. This technology enables heat to be “balanced” according to product requirements.

## Steaming function

Steam is provided from an integral steam unit and injected into the chamber on demand. Programmed parameters automatically control this function.

***After being steamed, the oven does not allow more steaming until the steam unit has recovered heat, typically for 3 to 10 minutes, depending on the selected program.***

All deck ovens have a steam damper that evacuates steam humidity into a vent at the rear of the oven.

## Baking advice

Advice for getting the best results from deck ovens:

1. **Do not place the products too close together.** *If the loaves are close to each other after the oven spring (expansion), it results in soft sides and may collapse on cooling.*
2. **Place the product evenly within the oven.** *Products bunched together are paler than those widely spaced.*
3. **Products should not be too close to the edge of the tile.** *As it expands towards the front, one side of the loaf may enter the cooler air by the door.*
4. **The door opening should be kept to a minimum** *because cold air enters the oven. Cooling of the sidewalls and roof causes the finished product to be lighter locally at the front and wastes heat. If loading times are consistently long, alter the front-top heat to put more heat at the front.*
5. **The product can form a skin if the loading takes a long time,** *which causes an imbalance and a less attractive finish. By using the pre-steam function before loading, this can be minimised. The steam function turns the elements off and injects steam to increase the humidity.*

## Bake settings

1. A good starting point for baking bread in Mono deck ovens is **437 °F (225 °C)**.  
**Top heat:** 60 to 65                      **Bottom heat:** 40
2. For cookies (and similar products), the oven's heat can be turned almost off. However, it may still be necessary to place the trays with, e.g. cookies, onto upturned trays on the oven sole.
3. **Steam** should be kept to a minimum for energy efficiency, depending on the product and finish. **Times of between 9 and 12 seconds should be adequate.** It is a good idea not to focus on the temperature recovery – this can vary from oven to oven.


**Is the product baked in the time and to the quality you require?**

Below are some tips for modifying the bake to get the product that you require.

- If your product is **light on top**, decrease the bottom heat and extend bake time or increase the top heat.
- If the product **sides are pale** and the **top dark**, space the products well apart, drop the top heat, and extend the bake time.
- **If the bake time is too long**, first increase the top heat to speed recovery. If this does not give sufficient savings, increase the baking temperature.
- **To thicken the crust**, set the Damper to be open for longer. Different ovens require different lengths of time.


# 7. Touchscreen Operation


Each deck has an independent, colour touchscreen for operating the oven.

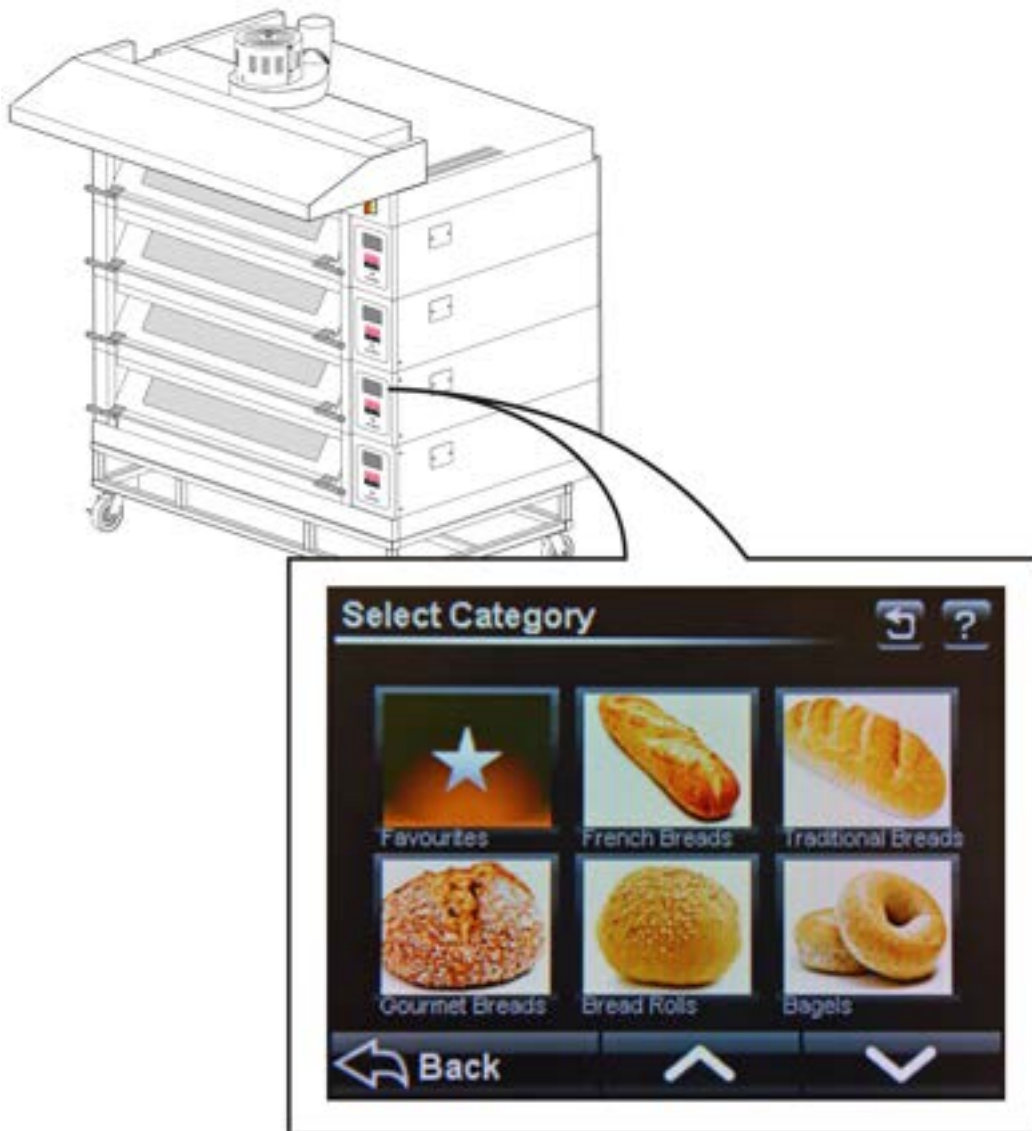

# Basic operation

Operations are performed by touching an area of the screen, bringing up the next information panel or activating a function.

 **Do not use excessive force.**  
The pressure required to operate the panel is adjustable in the **Settings**.

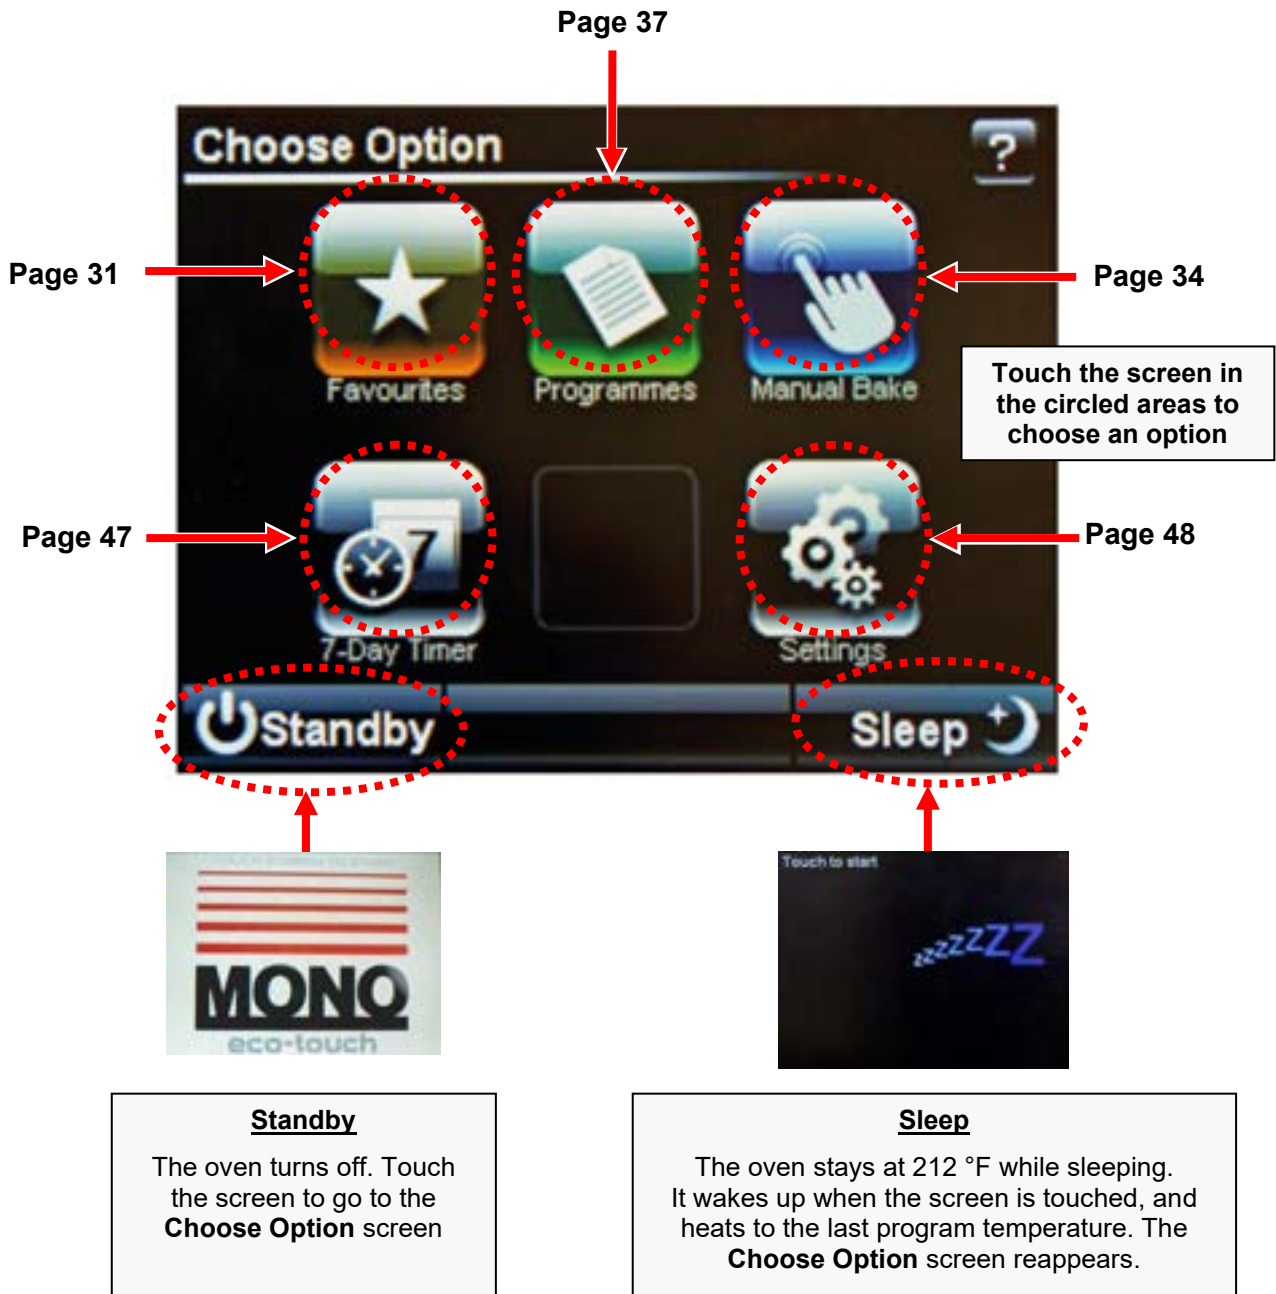

# Baking using the “Favourites” menu

Touch to open the **Favourites** selection screen

1



OPTION SCREEN

Touch the name of the product required

2




Up to 5 products are listed on a page. Touch the **UP-ARROW** or **DOWN-ARROW** to see other pages of products

SELECTION SCREEN

Touch **Full Load** or **Half Load** to select a quantity  
(This screen only appears if a half load is saved in the program)

3

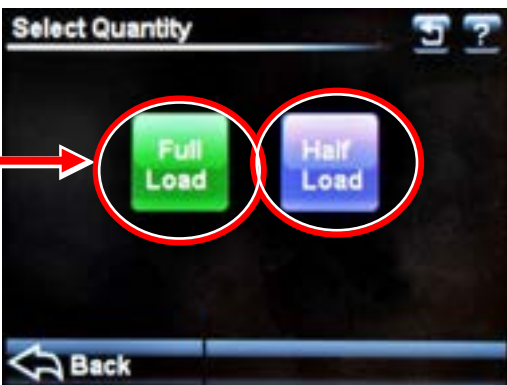

Touch the **Back** button to return to a previous screen

LOAD SCREEN

**4** Wait for the oven to reach the required temperature (200 °C in this example)  
 (The **Heating** message remains on the screen while the oven is heating up)


If the oven is too hot for the temperature chosen, the screen tells you to open the door for cooling. **Take care to avoid burns.**



HEATING SCREEN

**5** When the oven is at the correct temperature, the message changes to **Ready**. Now:  
**5.1.** Open the door and carefully load the oven with the prepared trays of product.  
**5.2.** Fully close the door.  
**5.3.** Touch the **Start** button.

**Tip!** To help keep the oven hot, avoid opening the door more than needed.

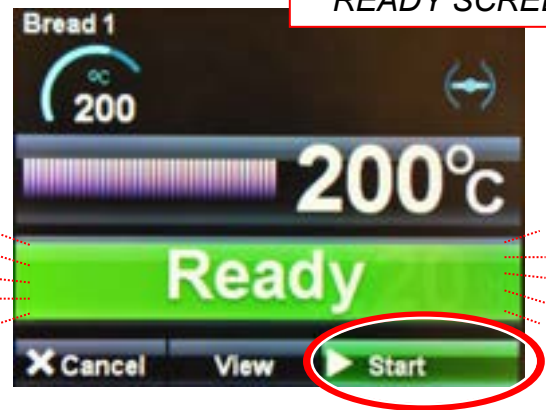

READY SCREEN

**6** The **Bake In Progress** screen shows the baking time remaining

Required temperature →  
 Temperature profile bar →  
 Bake time progress bar →

Actual oven temperature  
 (This will rise and fall near to the required temperature)



Baking time remaining

**Note:** The actual temperature shown will rise and fall above and below the required temperature as the oven cools and reheats. **This is not a fault.**



7

At the end of the bake time, a sounder will be heard and **Bake Over** will flash. Now:

7.1. Touch the **Stop** button.

7.2. Open the door.

7.3. Carefully remove the trays of product.

BAKE OVER SCREEN



**Note!** To keep the oven baking for extra minutes, touch the **+ 2 mins** button. This time can be adjusted in the set up.

**Touching the View button during a bake (optional)**

Touch the **View** button during a bake to show the settings for that particular bake.

Touch the **Cancel** button to go back to the previous screen. (It does not cancel the bake).



VIEW SCREEN



# Baking using the “Manual Bake” menu

Touch to open the **Manual Bake** screen **1**



OPTION SCREEN

**Set the top and bottom heat** **2**

- 2.1. Touch a % button on the screen to activate the keyboard screen.
- 2.2. Key in the required percentage of heat.
- 2.3. Touch **OK**.



MANUAL BAKE SCREEN

**Set the bake temperature** **3**

- 3.1. Touch the temperature to activate the keyboard screen.
- 3.2. Key in the required temperature.
- 3.4. Touch **OK**.



**Set the bake time (optional)** **4**

- 4.1. Touch the time to activate the keyboard screen.
- 4.2. Key in the required time.
- 4.3. Touch **OK**.



**Note:** The bake time does not have to be set in manual mode. When **Start** is pressed, the timer increases instead of counting down. Touch **Stop** to finish the bake.

### Set the Steam Time and Damper (if required)

(Manual Bake)

**Steam** **5**

Touch and hold for the time (seconds) steam is required.

(This can be used before or during the bake)


**Damper** **6**

Touch to set the Damper to open during the bake. (Icon changes colour to green)

Touch again to close the Damper. (Icon changes colour to red)



MANUAL BAKE SCREEN 2

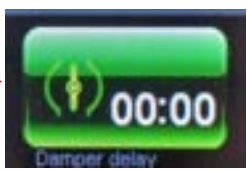

**Cancel**

Touch at any time to return to the **Options** screen.

Touch **Start** to begin the bake. **7**



Touch **Stop** when the end-of-bake buzzer sounds or when required time was entered. **8**

### Save (keep) the Manual Bake Program

(Manual Bake)



MANUAL BAKE SCREEN 3

**Save settings**

Touch **Save** to show an option screen.

(If no time was entered at the start of the bake, when **Stop** is touched at the start of the bake **Save** appears at the bottom of the screen)

**9**

**10** Touch **Add to favourites** or **Save As...**



**11** Use the keyboard to type the required name and touch **Save**.



**Note:** In manual mode, only one operation of the steam or damper is saved.

# Baking using the “Programmes” menu

**Note:** This manual covers two versions of the firmware. (The oven is pre-set to show one only).


- **PICTORIAL** version shows choices of product categories
- **NUMERICAL** version shows ranges of program numbers

Touch to open the **Select Category** or **Program Choice** screen. **1**





PICTORIAL or NUMERICAL

Touch the type of product or program-range. **2**

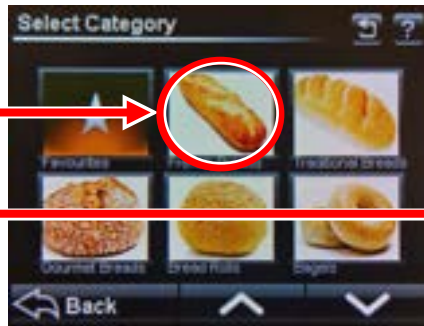


More choice screens

Touch the name or number of the product. **3**

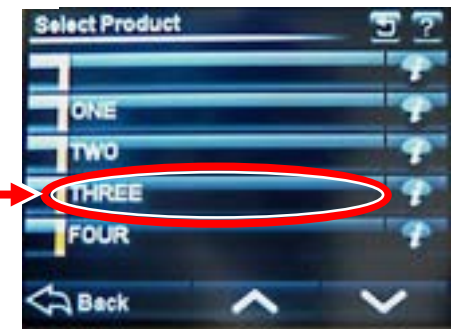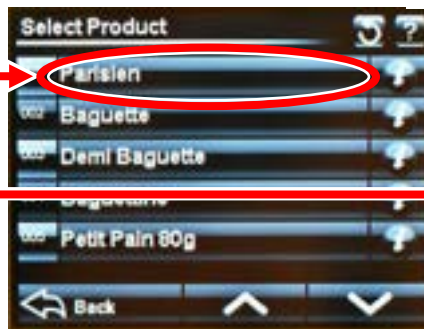

Touch **Full Load** or **Half Load** to select a quantity (This screen only appears if a half load is saved in the program). **4**

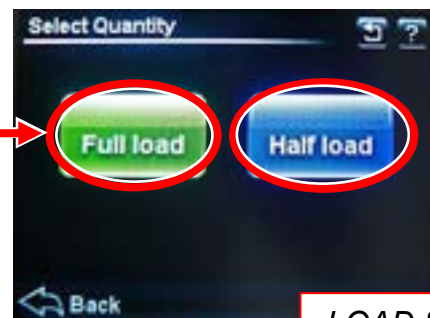

Touch the **Back** button to return to a previous screen.

LOAD SCREEN

**5**

Wait for the oven to reach the required temperature (200 °C in this example).  
 (The **Heating** message remains on the screen while the oven is heating up).

If the oven is too hot for the temperature chosen, the screen tells you to open the door for cooling.  
**Take care to avoid burns.**




HEATING SCREEN

READY SCREEN

**6**


When the oven is at the correct temperature, the message changes to **Ready**. Now:

- 6.1. Open the door and carefully load the oven with the prepared trays of product.
- 6.2. Fully close the door.
- 6.3. Touch the **Start** button.

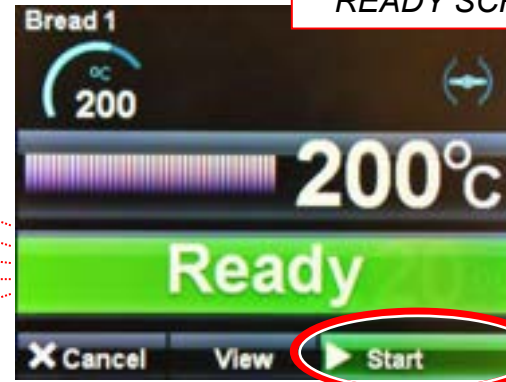

**7**

The **Bake In Progress** screen shows the baking time remaining.

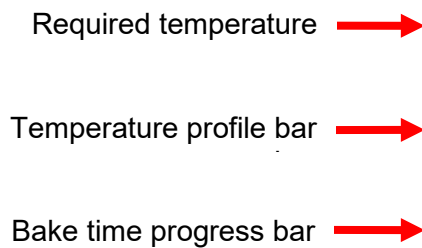

Actual oven temperature  
 (This will rise and fall near to the required temperature)

Baking time remaining

**Note:** The actual temperature shown will rise and fall above and below the required temperature as the oven cools and reheats.  
**This is not a fault.**

**8**

At the end of the bake time, a sounder will be heard and **Bake Over** will flash. Now:

- 8.1. Touch the **Stop** button.
- 8.2. Open the door.
- 8.3. Carefully remove the trays of product.

**Note:** To keep the oven baking for extra minutes, touch the **+ 2 mins** button. This time can be adjusted in the set up.



**Touching the View button during a bake (optional)**

Touch the **View** button during a bake to show the settings for that particular bake.

Touch the **Cancel** button to go back to the previous screen. (It does not cancel the bake).



**VIEW SCREEN**



# Creating a bake program

Touch **Programmes** to open the **Select Category** screen.



OPTION SCREEN

Touch the type of product wanted.



CATEGORY SCREEN

Touch the “?” button next to the blank program to open the **Product Information** screen.



SELECT SCREEN



## Enter the Supervisor passcode

## (Creating a Bake Program)

INFORMATION SCREEN




Touch **Option** to open the Pass Code screen. **4**

PASS CODE SCREEN

Enter the Supervisor pass code and then touch **OK**. **5**

**Note:** Default code = 123456. This can be changed in the Settings menu).

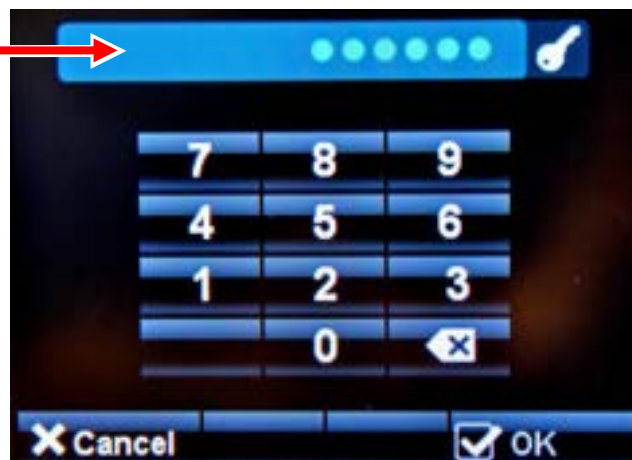


### Enter the product bake details

### (Creating a Bake Program)

#### OPTION SCREEN

Touch **Change product**. **6**

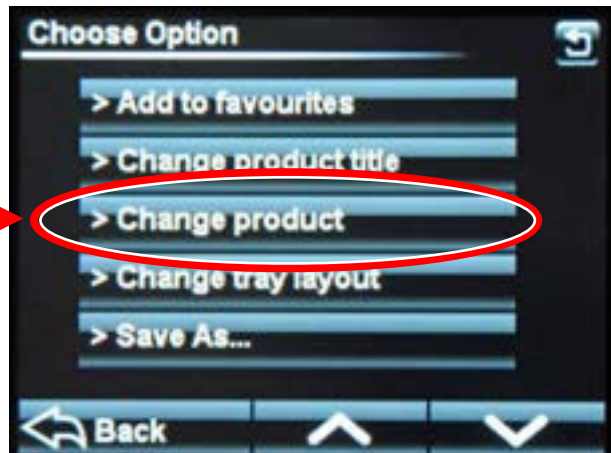

Load type

#### VALUE CHANGE SCREEN



Enter amount required and touch Done



Increase

Or use keypad

Decrease

Touch an item and then change the value by using the **UP-ARROW** and **DOWN-ARROW** keys, or the **keypad**. **7**


Touch **Half load** to changeover to the half-load settings, if required. To change back to the full-load settings, touch **Full load**.

Touch **Save** when satisfied with the settings.

## Changing the tray layout

## (Creating a Bake Program)

Touch **Change tray layout** **8**

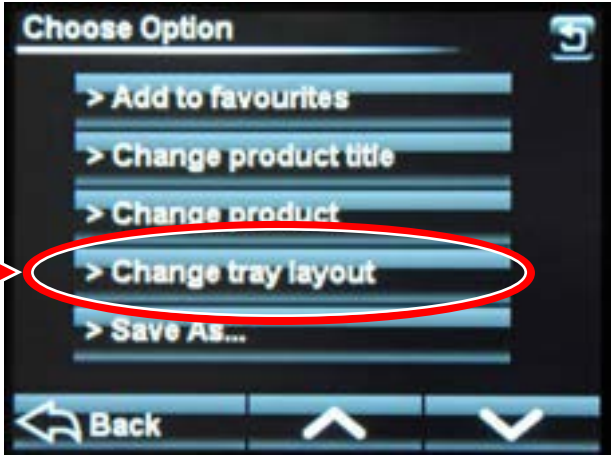


**OPTION SCREEN**

The image shows a 'Choose Option' menu with several options: '> Add to favourites', '> Change product title', '> Change product', '> Change tray layout', and '> Save As...'. The option '> Change tray layout' is circled in red. A yellow callout box with the number '8' points to this option. Below the menu is a 'Back' button and navigation arrows.

Touch here to adjust the number of products **across** the tray **9**

Touch here to adjust the number of products **down** the tray **10**

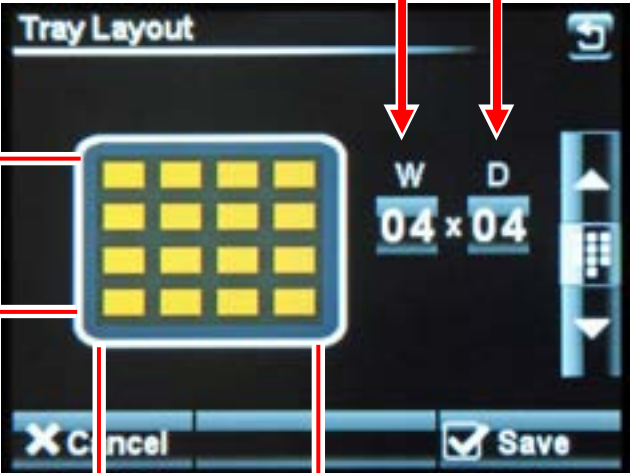

Increase value

Decrease value

When satisfied with the tray layout, touch **Save** to return to the options screen **11**


The image shows the 'Tray Layout' screen. It features a 4x4 grid of yellow squares representing products on a tray. The grid is labeled with 'W' and 'D' dimensions, showing '04 x 04'. To the right of the grid are two vertical arrows: an upward arrow labeled 'Increase value' and a downward arrow labeled 'Decrease value'. At the bottom of the screen are 'Cancel' and 'Save' buttons. A yellow callout box with the number '9' points to the 'W' dimension, and another with '10' points to the 'D' dimension. A third callout box with '11' points to the 'Save' button. Red dimension lines labeled 'W' and 'D' are shown around the grid.

## Save the product

## (Creating a Bake Program)

### OPTION SCREEN

Touch **Save As...** **12**

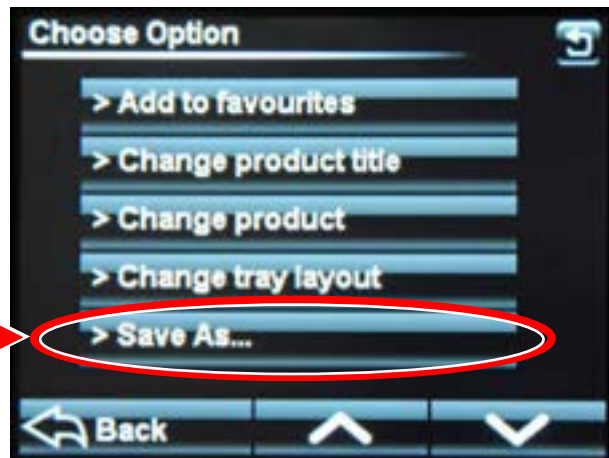

### KEYBOARD SCREEN

Type in the new name and touch **Save**. **13**



## Add a product to the favourites list (optional)

Touch the type of product wanted to open the **Select Product** screen.


1



CATEGORY SCREEN

Touch the “i” (information) button next to the product you want as a favourite. (This opens the **Choose Option** screen)


2

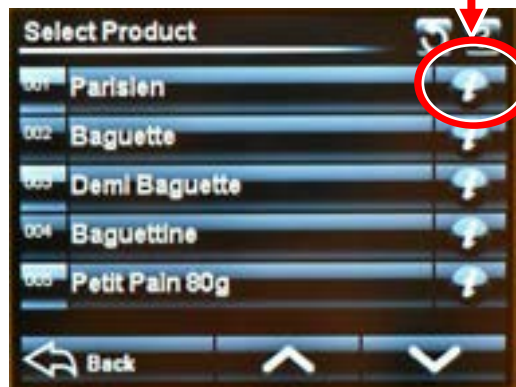

SELECT SCREEN

Enter the Supervisor pass code and then touch **OK**.

3

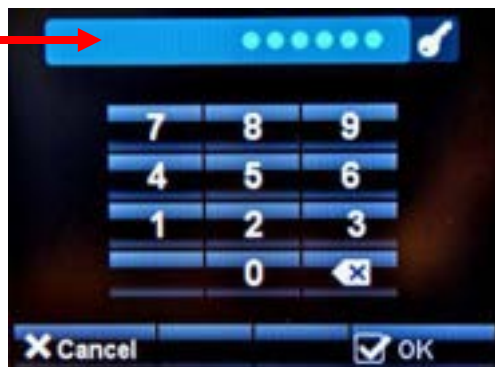


PASS CODE SCREEN

**Note:** Default code = 123456. This can be changed in the Settings menu).

Touch **Add to favourites**.

(The product now appears on the favourites list).

4

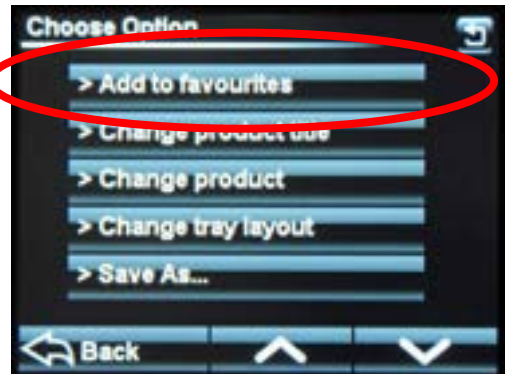

OPTION SCREEN

# 7-day timer

Touch **7-Day Timer** to open the setup screen.

1



OPTION SCREEN

Touch a day. (Sunday is highlighted in this example).

2

TIMER SETUP SCREEN

Set the **On** times. Touch the hours, and then use the arrow buttons. Repeat for the minutes.

3



Set the **Off** times. Touch the hours, and then use the arrow buttons. Repeat for the minutes.

4

Repeat steps 2 to 4 for each required day. Touch **Save** to activate the 7-day timer.

5

**Note:**  
Up to four on/off times can be set for each day.  
Touch "clear" to clear the settings on the day shown.

# Settings

OPTION SCREEN


Touch **Settings** to open the settings menu screen. **1**



PASS CODE SCREEN

Enter the Supervisor pass code and then touch **OK**. **2**

**Note:** Default code = 123456. This can be changed in the Settings menu).

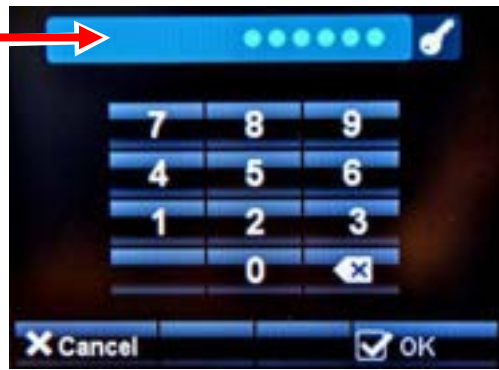

Choose the settings to alter. **3**

- Time & date..... page 49
- Start screen wallpaper..... page 49
- General settings ..... page 50
- High level settings ..... page 52
- Diagnostics..... page 58



SETTINGS SCREEN



### Set time and date

(Settings)

1  
Touch the screen to highlight the item to be changed (e.g. "12" hours).

TIME AND DATE SCREEN




2  
Use the **UP-ARROW** and **DOWN-ARROW** buttons to change the value of the item.

3  
Touch **Save** when the date and time are correct. The Settings menu will then open again.


### Select a wallpaper for the start screen

(Settings)

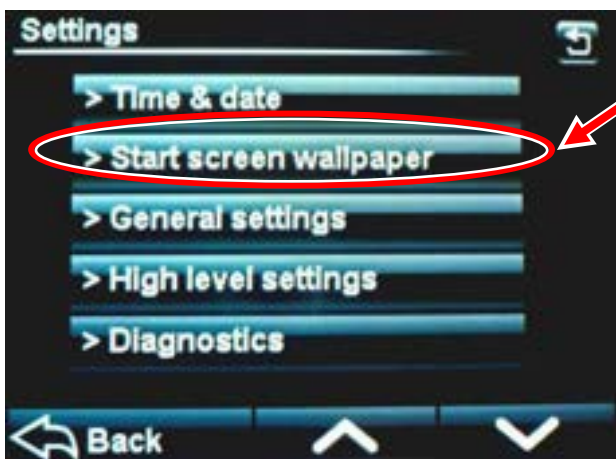

1  
Touch **Start screen wallpaper**.

2  
Touch a wallpaper to select it. Touch **Back** to confirm.

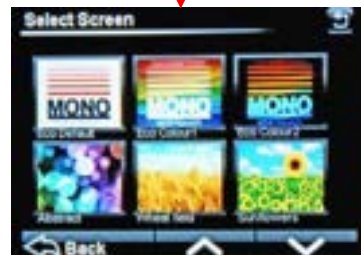

Use the arrow keys to see more wallpapers.


## General oven settings

(Settings)

See **Table 9** for a guide to each oven setting.

Touch **General settings** to open the **Oven Settings** screen.




1

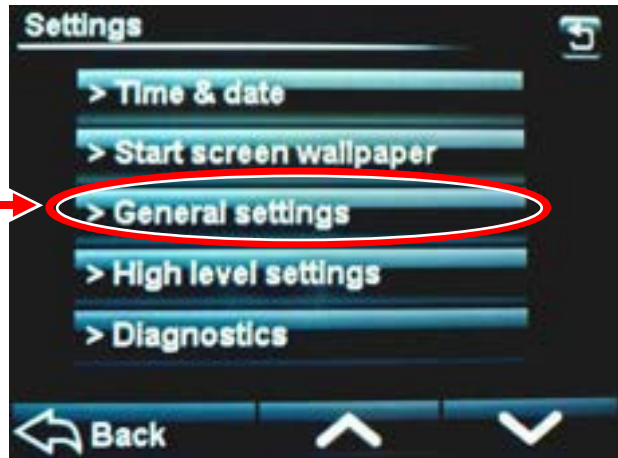

SETTINGS SCREEN

Use the arrow buttons to scroll through all the options. Change each one as required.

2

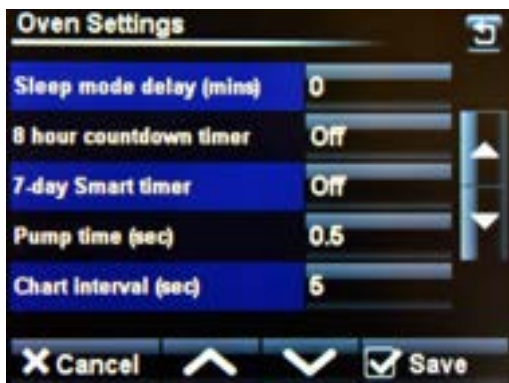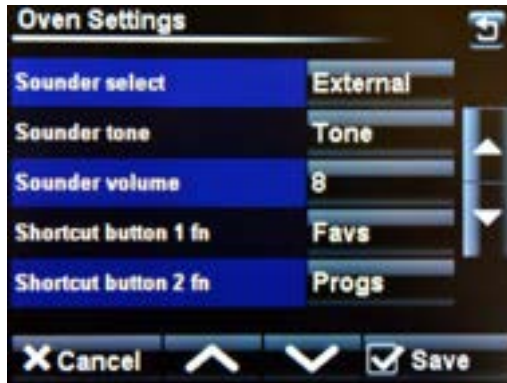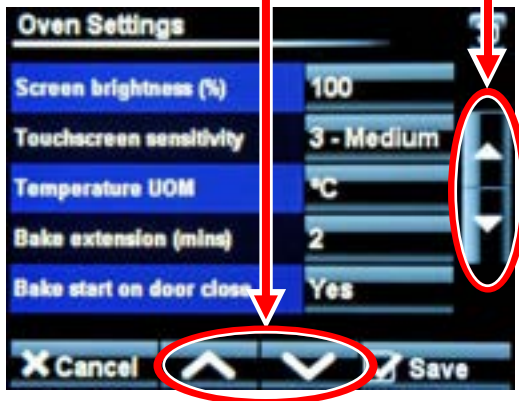

**Table 9:** Oven settings explained (general level)

| Oven setting                         | Explanation of the settings  | Default   |
|--------------------------------------|--|---|
| <b>Screen brightness</b>             | Adjusts the brightness level of the viewing screen.<br>Settings are 5 to 100.  | 100   |
| <b>Touchscreen sensitivity</b>       | Adjusts the pressure required to operate the touch screen.<br>(5 levels of sensitivity)  | 3 - Medium  |
| <b>Temperature unit of measure</b>   | Centigrade (Celsius) or Fahrenheit.<br>Settings are °C and °F.   | °F  |
| <b>Bake extension (minutes)</b>      | Adjusts the extra time at the end of a bake for each “extra time” button touch. Settings are <b>0</b> to <b>10</b> minutes.  | 2   |
| <b>Reselect product after bake</b>   | Resumes with the same product program without having to reselect it. Settings are <b>Yes</b> and <b>No</b> .   | Yes   |
| <b>Sleep mode delay</b>              | The oven goes into sleep mode after the set minutes, providing it is up to temperature and has been through at least one bake cycle. Settings are <b>0</b> to <b>60</b> .  | 0   |
| <b>8-hour countdown timer</b>        | After 8 hours, the oven gives a warning and then turns off. Touch any button for an extra hour, if required. <b>Off / On</b> .   | Off   |
| <b>7-day Smart timer</b>             | On = 7 -day timer function.<br>Off = Controls set start time depending on oven temperature.  | Off   |
| <b>Pump time (sec)</b>               | This setting increases the pipe pressure (before steaming) only when a pump is fitted. Settings are <b>0.0</b> to <b>3.0</b> .   | 0.5   |
| <b>Chart interval (sec)</b>          | Time interval in seconds that the bars show on the heat and bake time progress charts. Settings are <b>1</b> to <b>60</b> .  | 5   |
| <b>Sounder select</b>                | Set as <b>External</b> or <b>Onboard</b> sounder.  | External  |
| <b>Sounder tone</b>                  | Select a tone – <b>Voice</b> , <b>Tone</b> , or <b>Off</b> .   | Tone  |
| <b>Sounder volume</b>                | Adjust to suit the volume required for the onboard sounder.<br>Settings are <b>0</b> to <b>15</b> .  | 8   |
| <b>Shortcut buttons 1 fn to 5 fn</b> | It gives the choice of what buttons are active and in which order they appear on the options screen.<br>Settings are <b>Fav</b> (Favourites), <b>Progs</b> (Programs), <b>Manual</b> bake, <b>Multi</b> bake, <b>7-Day</b> timer, and <b>[Blank]</b> (not used).<br>(Settings for <b>6 fn</b> cannot be changed) | 1 fn = Fav<br>2 fn = Progs<br>3 fn = Manual<br>4 fn = 7-Day<br>5 fn = [Blank] |


# High-level settings

(Settings)

See Table 10 for a guide to the high-level settings.

SETTINGS SCREEN

1 Touch **High level settings** to open the settings screen.

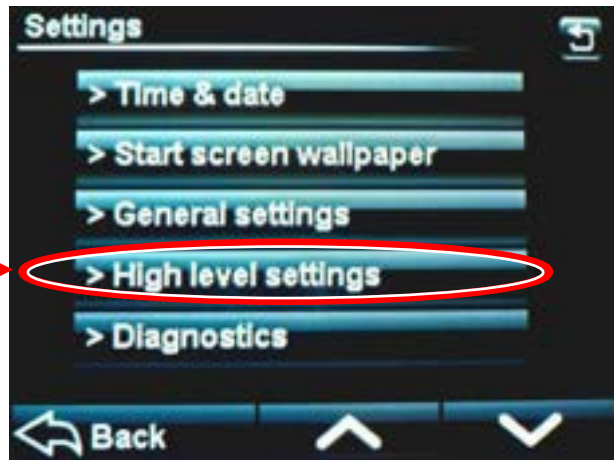


2 Enter the High Level passcode and then touch **OK**.



PASSCODE SCREEN

3 The **High Level Settings** menu screen then appears. Use the arrow buttons to scroll through all the options. Change each one as required.

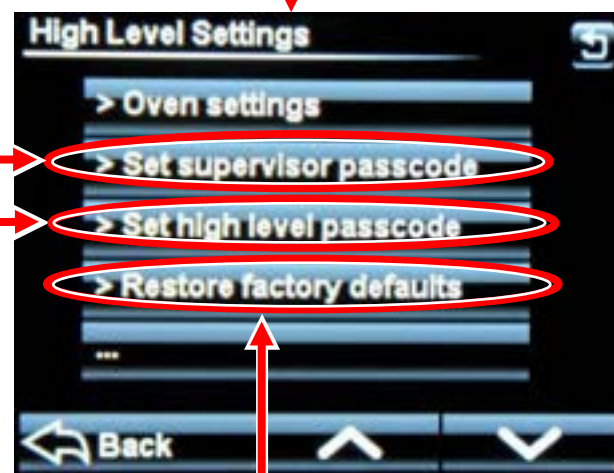

Change the Supervisor passcode

Change the High Level passcode


Touching **Oven settings** takes you to the settings menu. See page 49 for guidance.

Restores all screens to original (factory default) settings


**Table 10:** Oven settings explained (high level)

| Oven setting               | Explanation of the settings  | Default              |
|----------------------------|--|----------------------|
| Oven type                  | Always fixed to <b>DX</b> for this oven.   | DX                   |
| Maximum bake temperature   | It can be set from <b>250 °C (480 °F)</b> up to <b>300 °C (572 °F)</b> .   | 250 (°C) or 480 (°F) |
| Temperature offset         | Adjusts the display of the actual temperature in the oven. Usually, this is kept set to <b>0</b> .                               | 0                    |
| Bake hysteresis            | Sets bake temperature cycling around a set point. (Above and below. Settings for above/below thresholds are <b>1 to 20</b> ).    | 2                    |
| Bake cycle setpoint only   | No = Shows the set temperature point and actual temperatures on screen<br>Yes = Shows the set temperature point only             | No                   |
| Manual default temperature | Set for manual program default temperature.  | 150 (°C) or 302 (°F) |
| Sleep fallback             | Set the temperature required to be maintained by the oven while sleeping. Setting are <b>100 to 200 (°C) / 212 to 392 (°F)</b> . | 170 (°C) or 338 (°F) |
| Sleep hysteresis           | Keeps “sleep mode” temperature cycling around a set point. Settings for above/below thresholds are <b>1 to 20 (°C)</b> .         | 2 (°C)               |
| Ready accept high          | The highest temperature for the oven to display “Ready”.   | 15                   |
| Ready accept low           | The lowest temperature for the oven to display “Ready”.  | -10                  |
| Steam type                 | <b>Plate</b> or <b>Spray</b> – but keep this set to <b>Plate</b> .   | Plate                |
| Top gain                   | Top and bottom heat gains.<br>Settings are <b>0 to 255 °C (32 to 491 °F)</b>   | 50 (°C) or 122 (°F)  |
| Bottom gain                |  |                      |
| Mono constant              | Factory set. Do not change unless instructed to do so.   | (Factory)            |
| Steam trough temp.         | <i>Not applicable to this oven.</i>  |                      |
| Steam hysteresis           | <i>Not applicable to this oven.</i>  |                      |
| Steam trough accept        | <i>Not applicable to this oven.</i>  |                      |
| Light output soft start    | Some lights need this for a cold start-up to stop them blowing.  | Off                  |
| Heater control             | Always fixed to the Contactor setting for this oven.   | Contactor            |
| I/P diagnostic             | Displays inputs and outputs at the top of the screen to aid fault-finding.   | Off                  |

# 8. Using the USB Port

 **Never use this USB port to power or recharge electronic devices, e.g., cell phones. Incorrect usage causes damage to the oven and could result in a fire.**

Ensure the start screen is showing. **1**

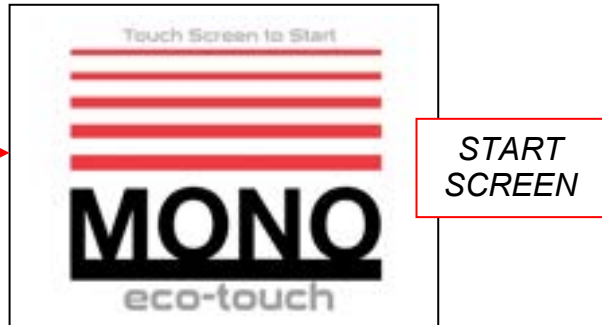


Insert the USB memory stick into the socket on the oven panel. (A rubber plug may have to be removed first).  
**Note:**  
The USB stick only fits in one way.  
Do not force it into the socket. **2**



Wait for the USB symbol to finish moving. **3**



If old firmware is found, the firmware version screen will appear.  
**4.1.** Touch **OK** to update firmware.  
**4.2.** Wait until the eco-touch controller has restarted after the update is complete.  
**4.3.** Remove the USB stick or touch **Cancel** to choose other items to update or change. (See next page) **4**

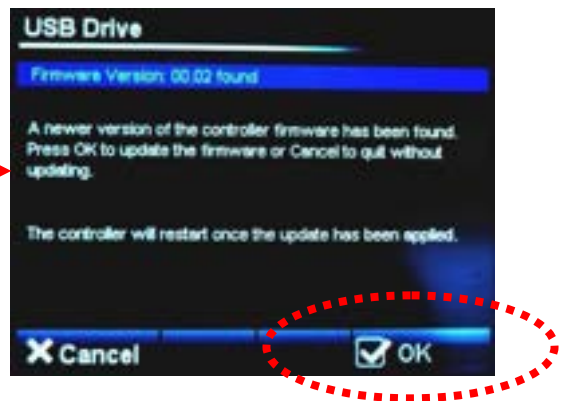


### Other items to update

(Using the USB port)

Choose action you would like to do (e.g. **Load Products**).

5

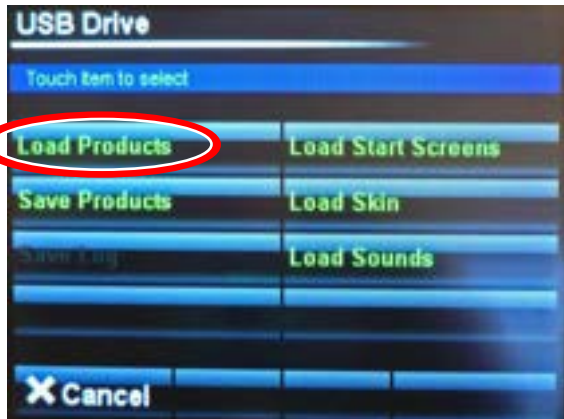


Select the file required (e.g. **MALEVOX**).

6



Remove the USB stick when confirmation of "file loaded ok" is seen.

7

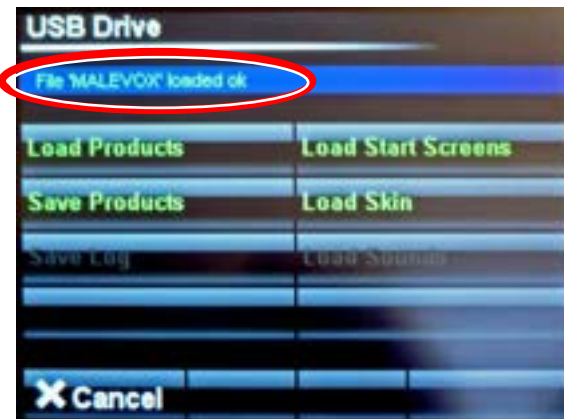

## Notes on using USB sticks

(Using the USB port)

For a USB stick (pen drive) to function correctly on a Mono oven with a port, it must have the following folder structure as a root folder.

### Mono

(Create 5 sub-folders within the **Mono** folder)

**Firmware**

**Products**

**Skins**

**Sounds**

**Startup**

The oven automatically finds the **Mono** folder after plugging the USB stick into the port. Use any USB stick (as it does not need to be blank), but the Mono folder must be in the root.

Place your recipe and product files in the “**Products**” sub-folder. The most used sub-folders are **Product Files**, **Skins**, and **Startup Screens**.

## SKINS

These files control the way the screen looks in different modes.

- **Pictorial** type skins are for when the screen displays categories using pictures.



- **Numerical** type skins are for when the screen displays categories using numbers.





## **PRODUCTS (PROGRAM FILES)**

These files contain the information for baking each product, e.g. bread, buns, and cakes.

## **STARTUP SCREENS**

These files show a picture or logo when the oven starts or wakes up.



# 9. Diagnostics

Touch **Settings** to open the settings menu screen.


1




OPTION SCREEN

Touch **Diagnostics** to open the diagnostics display.

2

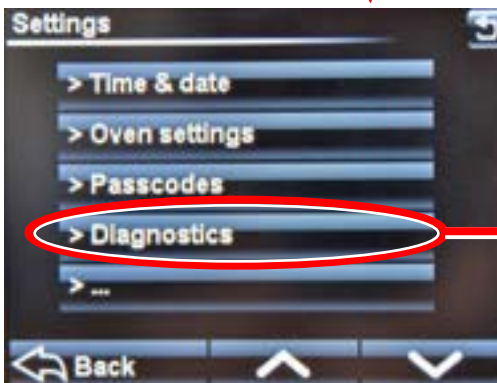

SETTINGS SCREEN

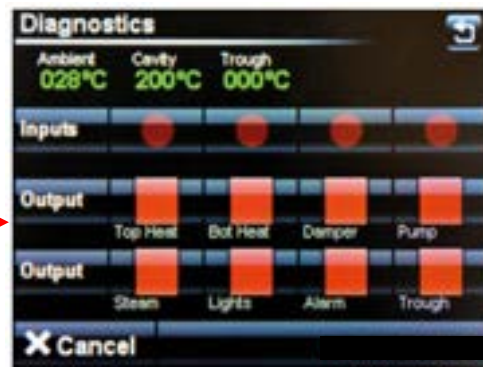


DIAGNOSTICS SCREEN

Inputs are highlighted when a signal is received, e.g. a door is open.

Touch the required output and a signal is sent to that item. The output being checked is highlighted when active. To stop the output, touch it again.

3

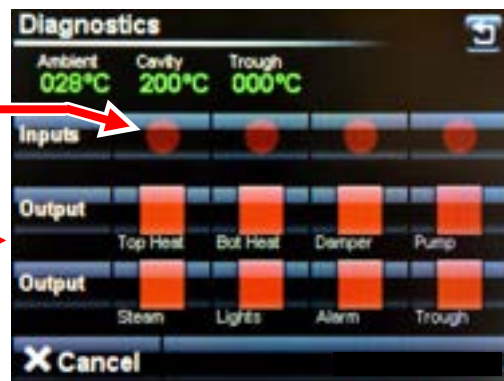

# 10. Passcodes

## Default passcodes

**Table 11:** Security level and passcodes


| Security level         | Passcode         |
|------------------------|------------------|
| Supervisor (low level) | 123456 (default) |
| High-level             | 654321 (default) |
| Master                 | 314159 (fixed)   |

To stop unauthorised changes to the oven setup, it is suggested that this section is removed from this manual and kept in a safe place for future reference.

If tampering could be a problem, it is a good idea to change the passcodes at regular intervals.

## How to change the passcodes

**NOTE:** Passcodes are required to navigate through these screens and make changes.

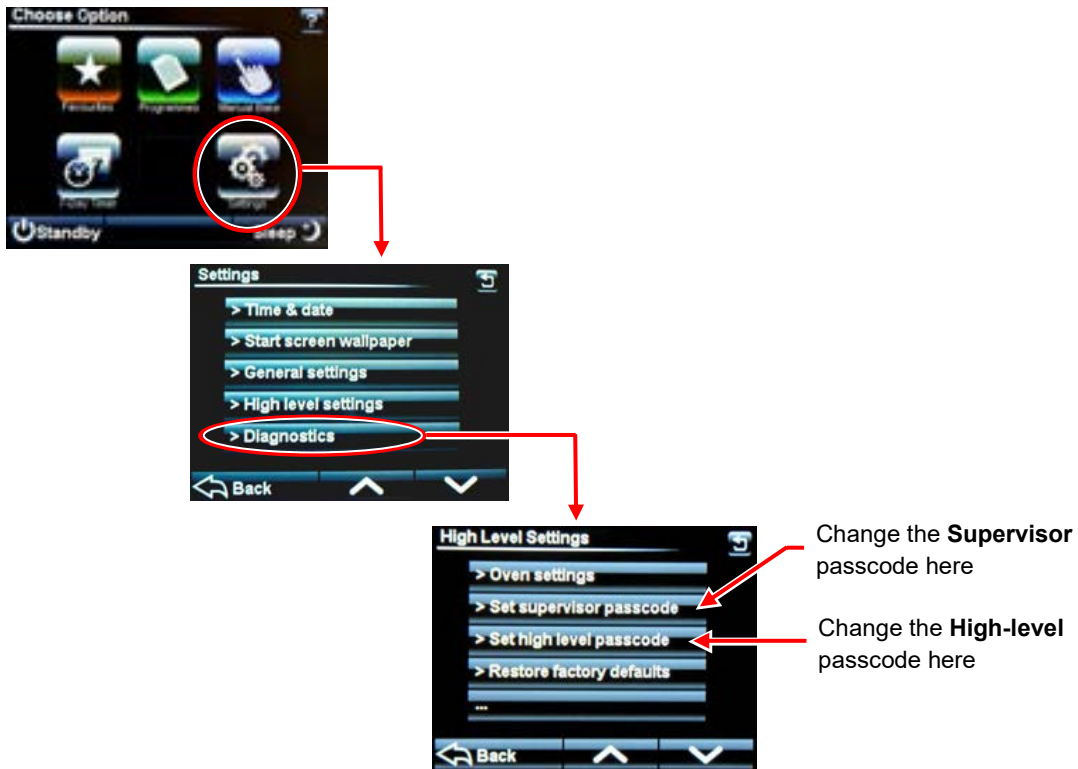

**(Blank Page)**

# 11. Cleaning

## Daily cleaning instructions



Isolate the oven from the mains supply before cleaning.



Take care water does not enter the control-panel mounting or roof-mounting fan.

### Procedure

1. Sweep any debris out of the oven **after** it has been allowed to cool.  
**NOTE:** Use a vacuum cleaner with metal attachments (i.e. able to take the heat), if available.
2. Wipe the oven front, back and sides with a damp cloth.
3. Spot clean outside with a damp cloth, soaked in a mild detergent solution and hot water.  
**Ensure excess water is not applied around the area of the electrical panels.**

## Weekly cleaning instructions



Isolate the oven from the electrical supply before cleaning.



Take care that water does not enter the control panel or roof-mounted fan.



Do not stand on the roof.

### Procedure

1. Complete the daily cleaning procedure as above.
2. Use a nylon brush to scrub the wheels with mild detergent and hot water.  
**NOTE:** Using too much water eventually rusts the metalwork.
3. Ensure the oven roof area is clear of debris and dust build-up.

## 12. Troubleshooting

### None of the decks switched on

- Is the oven's main isolator set to the on (I) position?
- Check if the timer clock of the bakery's mains power supply is working (if fitted).
- Is the clock set correctly to power the oven on the required day and time?

### One deck has not switched on

- Check if the individual deck timer is to come on at a specific time.

### Uneven or patchy bake

- The deck door is open too often or long whilst loading (front pale, back burnt).
- Uneven loading.
- Faulty element.
- The top or bottom deck elements are not functioning.
- No supply voltage across a phase.

### Actual temperature is far exceeding the set temperature

When empty, the temperature of a deck oven can exceed the set baking temperature. This overheat is marginal when the deck is full of product. If the elements continue to heat up after reaching the set temperature, call MONO for technical assistance.

(Please allow up to 59 °F (15 °C) difference before diagnosing a fault condition).

### Poor recovery of actual temperature after loading

- Doors may have been left open too long during loading, allowing heat to escape.
- Damper may have been left open during loading/baking, allowing heat to escape.
- Top or bottom heat may not be working.
- No supply voltage across a phase.

### Steam system not operating correctly













- Is water connected correctly?
- Is the tap to each deck in the on position?
- Has enough time elapsed since the last steaming?

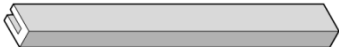

Once steamed, the oven does not steam until the steam unit has recovered heat, typically 3 to 10 minutes depending on the program selected.

# 13. Service

## Oven spares

**Table 12:** Oven spares

| Spare                      |  | Part number  |
|----------------------------|--|--------------|
| Frosted glass (lights)     |    | 257-02-00027 |
| Plain glass (lights)       |    | 257-02-00028 |
| Door bumper stop           |    | 257-03-00094 |
| Hinge pin, right-hand-side |    | 257-03-00005 |
| Hinge pin, left-hand-side  |   | 257-03-00009 |
| Black door handle          |  | A900-27-192  |
| Door spring                |  | 257-03-00017 |
| Wire rope                  |  | 257-03-00024 |
| Spring retaining pin       |  | 257-03-00025 |
| Pulley                     |  | 257-03-00015 |
| Pulley spindle             |  | 257-03-00013 |
| Damper drive coupling      |  | 257-07-00007 |
| Element gasket             |  | 245-02-01300 |

| Spare  |  | Part number                               |
|--|--|---|
| 24v 20w Dichroic Lamp  |   | B855-94-008                               |
| Top heat element, 0.66 kW<br>Top heat element, 0.4 kW<br>Bottom heat element, 0.5 kW |  | B854-04-102<br>B854-04-100<br>B854-04-101 |

## Service Information

If a fault arises, please do not hesitate to contact the MONO Customer Service Department. Quote the machine serial number on the silver information plate of the machine and on the front cover of this manual.



## MONO Equipment

Queensway, Swansea West Industrial Park, Swansea, SA5 4EB UK

**Tel. 01792 561234**

Spares +44(0)1792 564039

Email: [mono@monoequip.com](mailto:mono@monoequip.com)

**[www.monoequip.com](http://www.monoequip.com)**

## Disposal

When the oven ends its working life, dispose of parts in the appropriate place by recycling or other means as the law permits at that time.



# 14. Maintenance

## General maintenance



**WARNING**

- This appliance must be maintained at regular intervals. The frequency of maintenance will depend upon your specific use and location. The maximum service interval should be 12 months.
- Service and maintenance should only be undertaken by suitably qualified, trained, and competent engineers.
- You must immediately report any damage or defect arising with the appliance.
- Unsafe equipment is dangerous. Do not use the appliance. Isolate the power supply and contact MONO or your appointed service agent.

- Check for frayed or bare cables.
  - Do not use the machine if frayed or bare cables are visible.
- Follow cleaning instructions (see **Cleaning** on page 61).


## Light bulb replacement



**WARNING** Disconnect from the supply before replacing light bulbs.

### How to replace the 24Vac 20w lamp (part number B855-94-008)

1. Unscrew the plate (A) next to the light to be replaced.
  - Keep the hex head socket screws (B) safe.

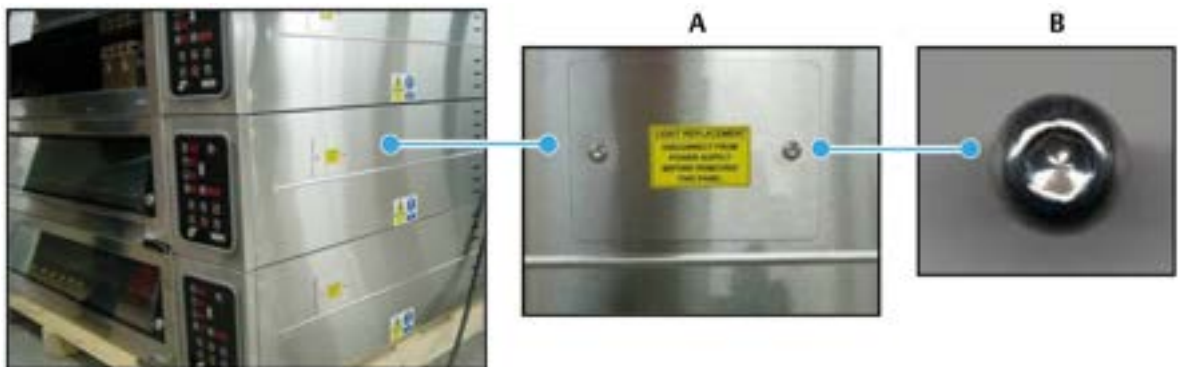

2. Slide the fitting out.



3. Remove the light from the holding slot and unclip from the cable.



4. Replace the light and refit all parts.



5. Reconnect the power supply and test.

# 15. Oven Electrics

**Table 13:** Parts list for the electrical drawings (3-tray wide)

| Reference in drawing | Description                            | Part number  |
|----------------------|--|--------------|
| F1, F2, and F3       | Heaters MCB (220 Vac)                  | B872-22-115  |
|                      | Heaters MCB (480 Vac)                  | B872-22-113  |
| F4                   | Control power supply MCB               | B872-22-118  |
| F5                   | Overheat thermostat                    | B888-30-015  |
| T1                   | Control circuit power supply (220 Vac) | B801-93-005  |
|                      | Control circuit power supply (480 Vac) | B801-93-009  |
| K1                   | Top heat contactor                     | B801-08-021  |
| K2                   | Bottom heat contactor                  | B801-08-021  |
| Y1                   | Water solenoid (8 mm pipe)             | A900-34-365  |
| H1                   | Interior light                         | B855-94-008  |
| B1                   | Oven thermocouple                      | B873-95-003  |
| U1                   | Main ECO printed circuit board         | 158-25-80000 |
| D1                   | Damper solenoid                        | B749-83-004  |
| R1                   | Top heat element, 1.0 Kw (220 Vac)     | B854-04-089  |
|                      | Top heat element, 1.0 Kw (480 Vac)     | B854-04-096  |
| R2                   | Top heat element, 1.0 Kw (220 Vac)     | B854-04-088  |
|                      | Top heat element, 1.0 Kw (480 Vac)     | B854-04-094  |
| R3                   | Top heat element, 0.6 kW (220 Vac)     | B854-04-088  |
|                      | Top heat element, 0.6 kW (480 Vac)     | B854-04-094  |
| R4                   | Top heat element, 0.6 kW (220 Vac)     | B854-04-088  |
|                      | Top heat element, 0.6 kW (480 Vac)     | B854-04-094  |
| R5                   | Top heat element, 0.6 kW (220 Vac)     | B854-04-088  |
|                      | Top heat element, 0.6 kW (480 Vac)     | B854-04-094  |
| R6                   | Top heat element, 0.6 kW (220 Vac)     | B854-04-088  |
|                      | Top heat element, 0.6 kW (480 Vac)     | B854-04-094  |
| R7                   | Top heat element, 0.6 kW (220 Vac)     | B854-04-088  |
|                      | Top heat element, 0.6 kW (480 Vac)     | B854-04-094  |

|     |  |             |
|-----|--|-------------|
| R8  | Bottom heat element, 0.75 kW (220 Vac) | B854-04-089 |
|     | Bottom heat element, 0.75 kW (480 Vac) | B854-04-095 |
| R9  | Bottom heat element, 0.6 kW (220 Vac)  | B854-04-088 |
|     | Bottom heat element, 0.6 kW (480 Vac)  | B854-04-094 |
| R10 | Bottom heat element, 0.6 kW (220 Vac)  | B854-04-088 |
|     | Bottom heat element, 0.6 kW (480 Vac)  | B854-04-094 |
| R11 | Bottom heat element, 0.6 kW (220 Vac)  | B854-04-088 |
|     | Bottom heat element, 0.6 kW (480 Vac)  | B854-04-094 |
| R12 | Bottom heat element, 0.6 kW (220 Vac)  | B854-04-088 |
|     | Bottom heat element, 0.6 kW (480 Vac)  | B854-04-094 |
| R13 | Bottom heat element, 0.6 kW (220 Vac)  | B854-04-088 |
|     | Bottom heat element, 0.6 kW (480 Vac)  | B854-04-094 |
| R14 | Bottom heat element, 0.6 kW (220 Vac)  | B854-04-088 |
|     | Bottom heat element, 0.6 kW (480 Vac)  | B854-04-094 |

**Table 14:** Parts list for the electrical drawings (2-tray wide)

| Reference in drawing | Description                            | Part number  |
|----------------------|--|--------------|
| F1, F2, and F3       | Heaters MCB (220 Vac)                  | B872-22-114  |
|                      | Heaters MCB (480 Vac)                  | B872-22-112  |
| F4                   | Control power supply MCB               | B872-22-118  |
| F5                   | Overheat thermostat                    | B888-30-015  |
| T1                   | Control circuit power supply (220 Vac) | B801-93-005  |
|                      | Control circuit power supply (480 Vac) | B801-93-009  |
| K1                   | Top heat contactor                     | B801-08-021  |
| K2                   | Bottom heat contactor                  | B801-08-021  |
| Y1                   | Water solenoid (8 mm pipe)             | A900-34-365  |
| H1                   | Interior light                         | B855-94-008  |
| B1                   | Oven thermocouple                      | B873-95-003  |
| U1                   | Main ECO printed circuit board         | 158-25-80000 |
| D1                   | Damper solenoid                        | B749-83-004  |
| R1                   | Top heat element, 0.65 kW (220 Vac)    | B854-04-099  |
|                      | Top heat element, 0.65 kW (480 Vac)    | B854-04-105  |
| R2                   | Top heat element, 0.4 kW (220 Vac)     | B854-04-097  |
|                      | Top heat element, 0.4 kW (480 Vac)     | B854-04-103  |
| R3                   | Top heat element, 0.4 kW (220 Vac)     | B854-04-097  |
|                      | Top heat element, 0.4 kW (480 Vac)     | B854-04-103  |
| R4                   | Top heat element, 0.4 kW (220 Vac)     | B854-04-097  |
|                      | Top heat element, 0.4 kW (480 Vac)     | B854-04-103  |
| R5                   | Top heat element, 0.4 kW (220 Vac)     | B854-04-097  |
|                      | Top heat element, 0.4 kW (480 Vac)     | B854-04-103  |
| R6                   | Top heat element, 0.4 kW (220 Vac)     | B854-04-097  |
|                      | Top heat element, 0.4 kW (480 Vac)     | B854-04-103  |
| R7                   | Top heat element, 0.4 kW (220 Vac)     | B854-04-097  |
|                      | Top heat element, 0.4 kW (480 Vac)     | B854-04-103  |
| R8                   | Bottom heat element, 0.5 kW (220 Vac)  | B854-04-098  |
|                      | Bottom heat element, 0.5 kW (480 Vac)  | B854-04-104  |

|     |                                       |             |
|-----|---------------------------------------|-------------|
| R9  | Bottom heat element, 0.4 kW (220 Vac) | B854-04-097 |
|     | Bottom heat element, 0.4 kW (480 Vac) | B854-04-103 |
| R10 | Bottom heat element, 0.4 kW (220 Vac) | B854-04-097 |
|     | Bottom heat element, 0.4 kW (480 Vac) | B854-04-103 |
| R11 | Bottom heat element, 0.4 kW (220 Vac) | B854-04-097 |
|     | Bottom heat element, 0.4 kW (480 Vac) | B854-04-103 |
| R12 | Bottom heat element, 0.4 kW (220 Vac) | B854-04-097 |
|     | Bottom heat element, 0.4 kW (480 Vac) | B854-04-103 |
| R13 | Bottom heat element, 0.4 kW (220 Vac) | B854-04-097 |
|     | Bottom heat element, 0.4 kW (480 Vac) | B854-04-103 |
| R14 | Bottom heat element, 0.4 kW (220 Vac) | B854-04-097 |
|     | Bottom heat element, 0.4 kW (480 Vac) | B854-04-103 |


**Table 15:** Parts list for the electrical drawings (1-tray wide)


| Reference in drawing | Description                            | Part number  |
|----------------------|--|--------------|
| F1, F2, and F3       | Heaters MCB (220 Vac)                  | B872-22-112  |
|                      | Heaters MCB (480 Vac)                  | B872-22-111  |
| F4                   | Control power supply MCB               | B872-22-118  |
| F5                   | Overheat thermostat                    | B888-30-015  |
| T1                   | Control circuit power supply (220 Vac) | B801-93-005  |
|                      | Control circuit power supply (480 Vac) | B801-93-000  |
| K1                   | Top heat contactor                     | B801-08-021  |
| K2                   | Bottom heat contactor                  | B801-08-021  |
| Y1                   | Water solenoid (8 mm pipe)             | A900-34-365  |
| H1                   | Interior light                         | B855-94-008  |
| B1                   | Oven thermocouple                      | B873-95-003  |
| U1                   | Main ECO printed circuit board         | 158-25-80000 |
| D1                   | Damper solenoid                        | B749-83-004  |
| R1                   | Top heat element, 0.325 kW (220 Vac)   | B854-04-108  |
|                      | Top heat element, 0.525 kW (480 Vac)   | B854-04-114  |
| R2                   | Top heat element, 0.2 kW (220 Vac)     | B854-04-106  |
|                      | Top heat element, 0.325 kW (480 Vac)   | B854-04-112  |
| R3                   | Top heat element, 0.2 kW (220 Vac)     | B854-04-106  |
|                      | Top heat element, 0.325 kW (480 Vac)   | B854-04-112  |
| R4                   | Top heat element, 0.2 kW (220 Vac)     | B854-04-106  |
|                      | Top heat element, 0.325 kW (480 Vac)   | B854-04-112  |
| R5                   | Top heat element, 0.2 kW (220 Vac)     | B854-04-106  |
|                      | Top heat element, 0.325 kW (480 Vac)   | B854-04-112  |
| R6                   | Top heat element, 0.2 kW (220 Vac)     | B854-04-106  |
|                      | Top heat element, 0.325 kW (480 Vac)   | B854-04-112  |
| R7                   | Top heat element, 0.2 kW (220 Vac)     | B854-04-106  |
|                      | Top heat element, 0.325 kW (480 Vac)   | B854-04-112  |
| R8                   | Bottom heat element, 0.25 kW (220 Vac) | B854-04-098  |
|                      | Bottom heat element, 0.4 kW (480 Vac)  | B854-04-113  |


|     |   |             |
|-----|---|-------------|
| R9  | Bottom heat element, 0.2 kW (220 Vac)   | B854-04-097 |
|     | Bottom heat element, 0.325 kW (480 Vac) | B854-04-112 |
| R10 | Bottom heat element, 0.2 kW (220 Vac)   | B854-04-097 |
|     | Bottom heat element, 0.325 kW (480 Vac) | B854-04-112 |
| R11 | Bottom heat element, 0.2 kW (220 Vac)   | B854-04-097 |
|     | Bottom heat element, 0.325 kW (480 Vac) | B854-04-112 |
| R12 | Bottom heat element, 0.2 kW (220 Vac)   | B854-04-097 |
|     | Bottom heat element, 0.325 kW (480 Vac) | B854-04-112 |
| R13 | Bottom heat element, 0.2 kW (220 Vac)   | B854-04-097 |
|     | Bottom heat element, 0.325 kW (480 Vac) | B854-04-112 |
| R14 | Bottom heat element, 0.2 kW (220 Vac)   | B854-04-097 |
|     | Bottom heat element, 0.325 kW (480 Vac) | B854-04-112 |





# Electrical drawings

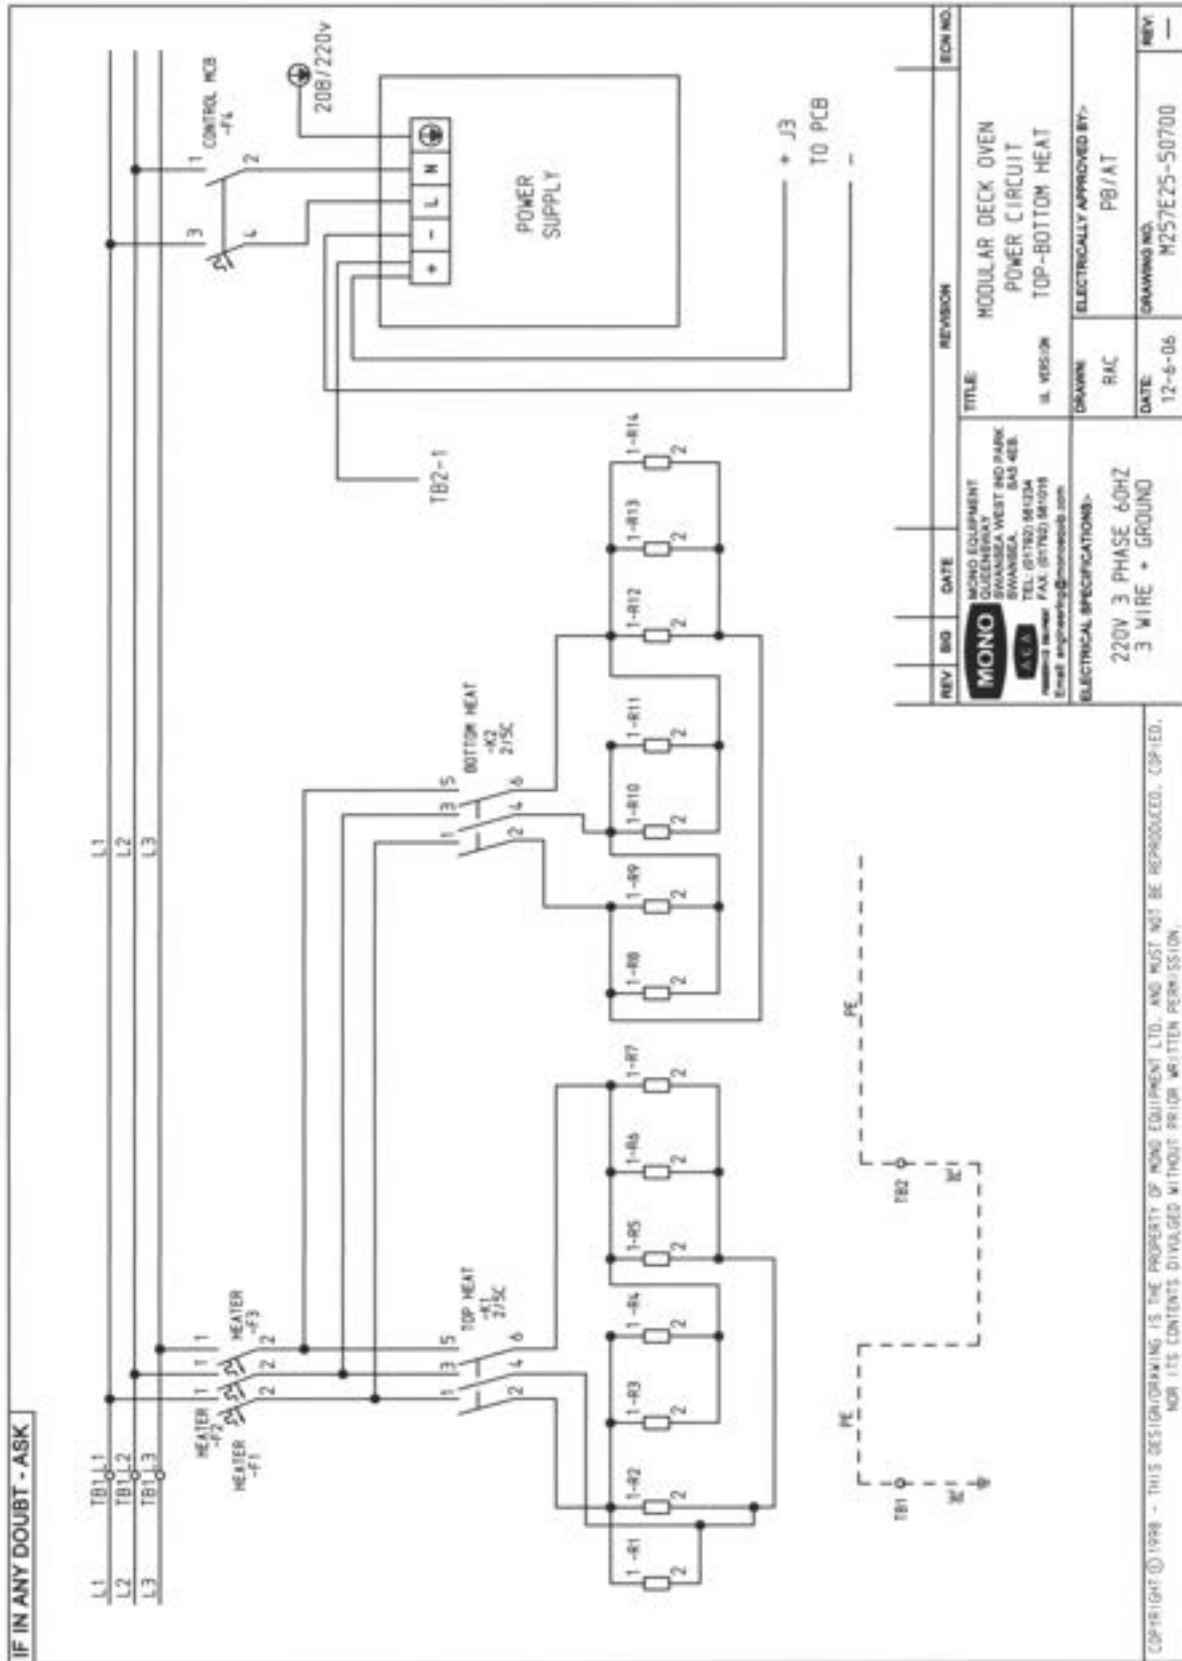


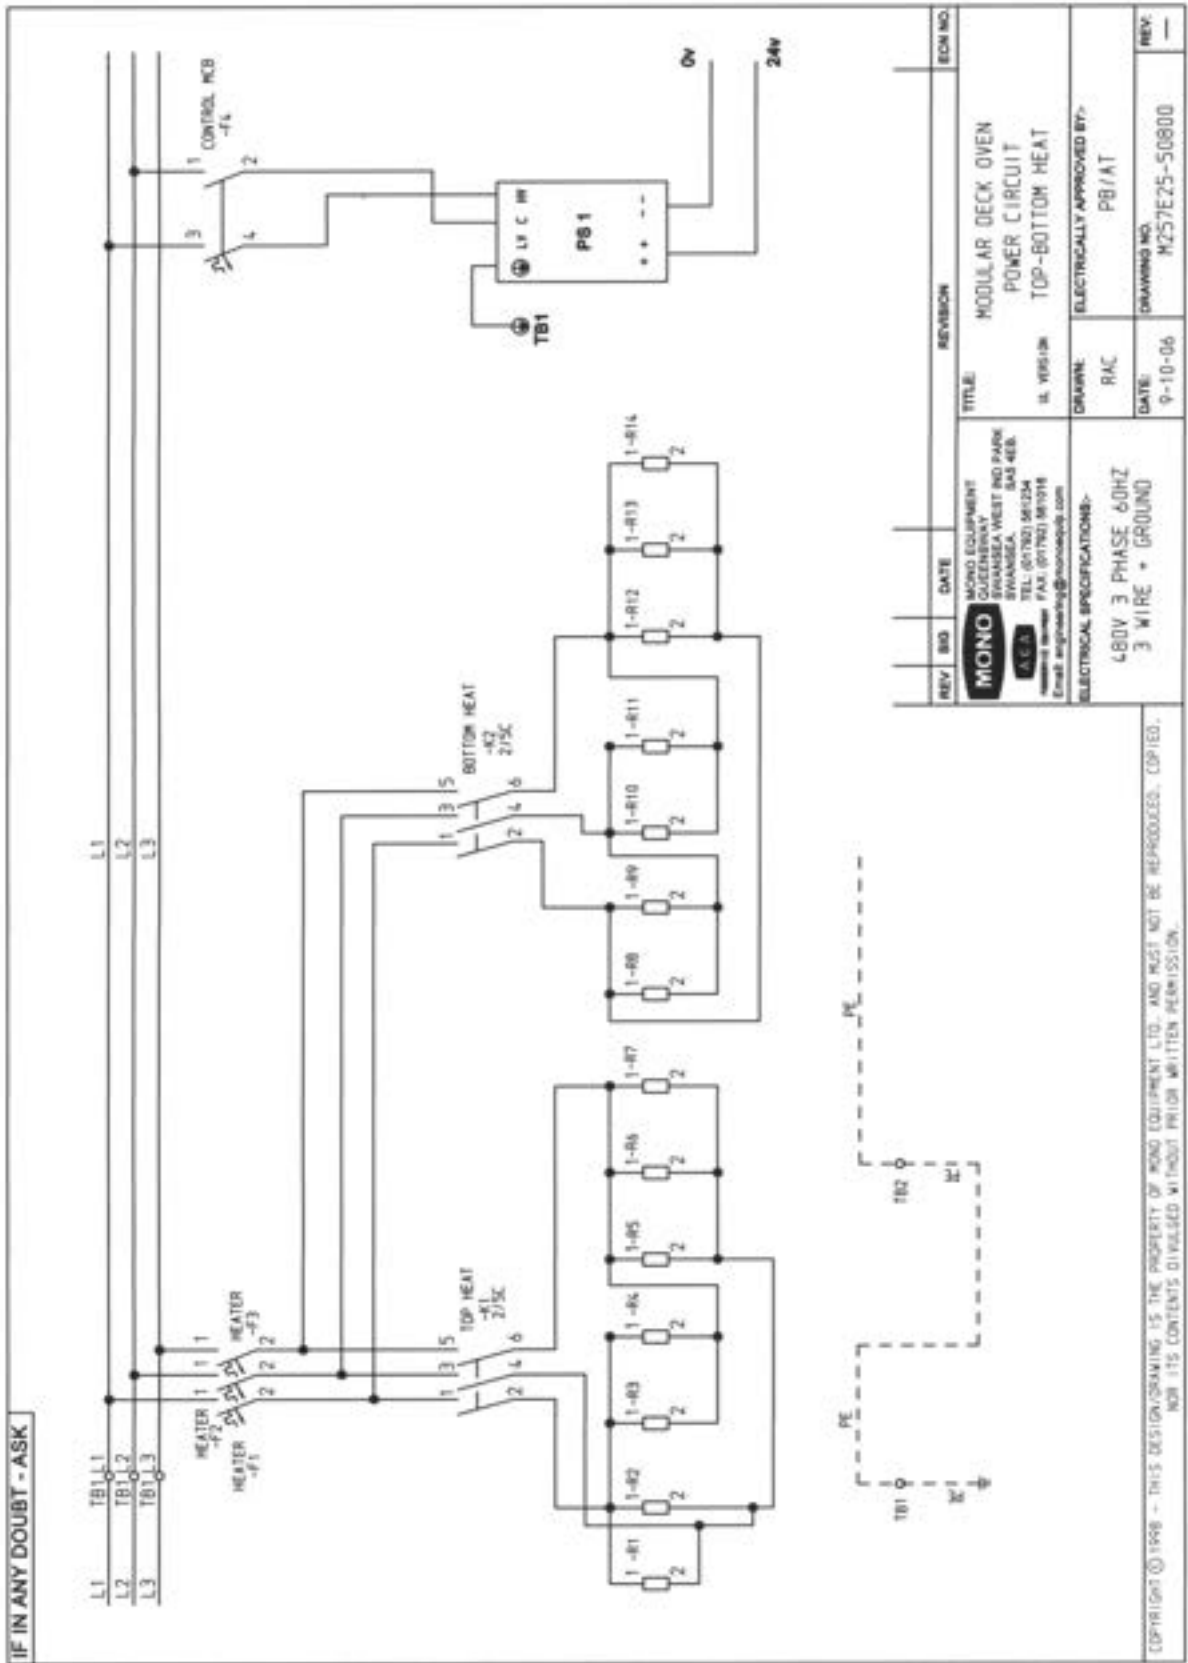

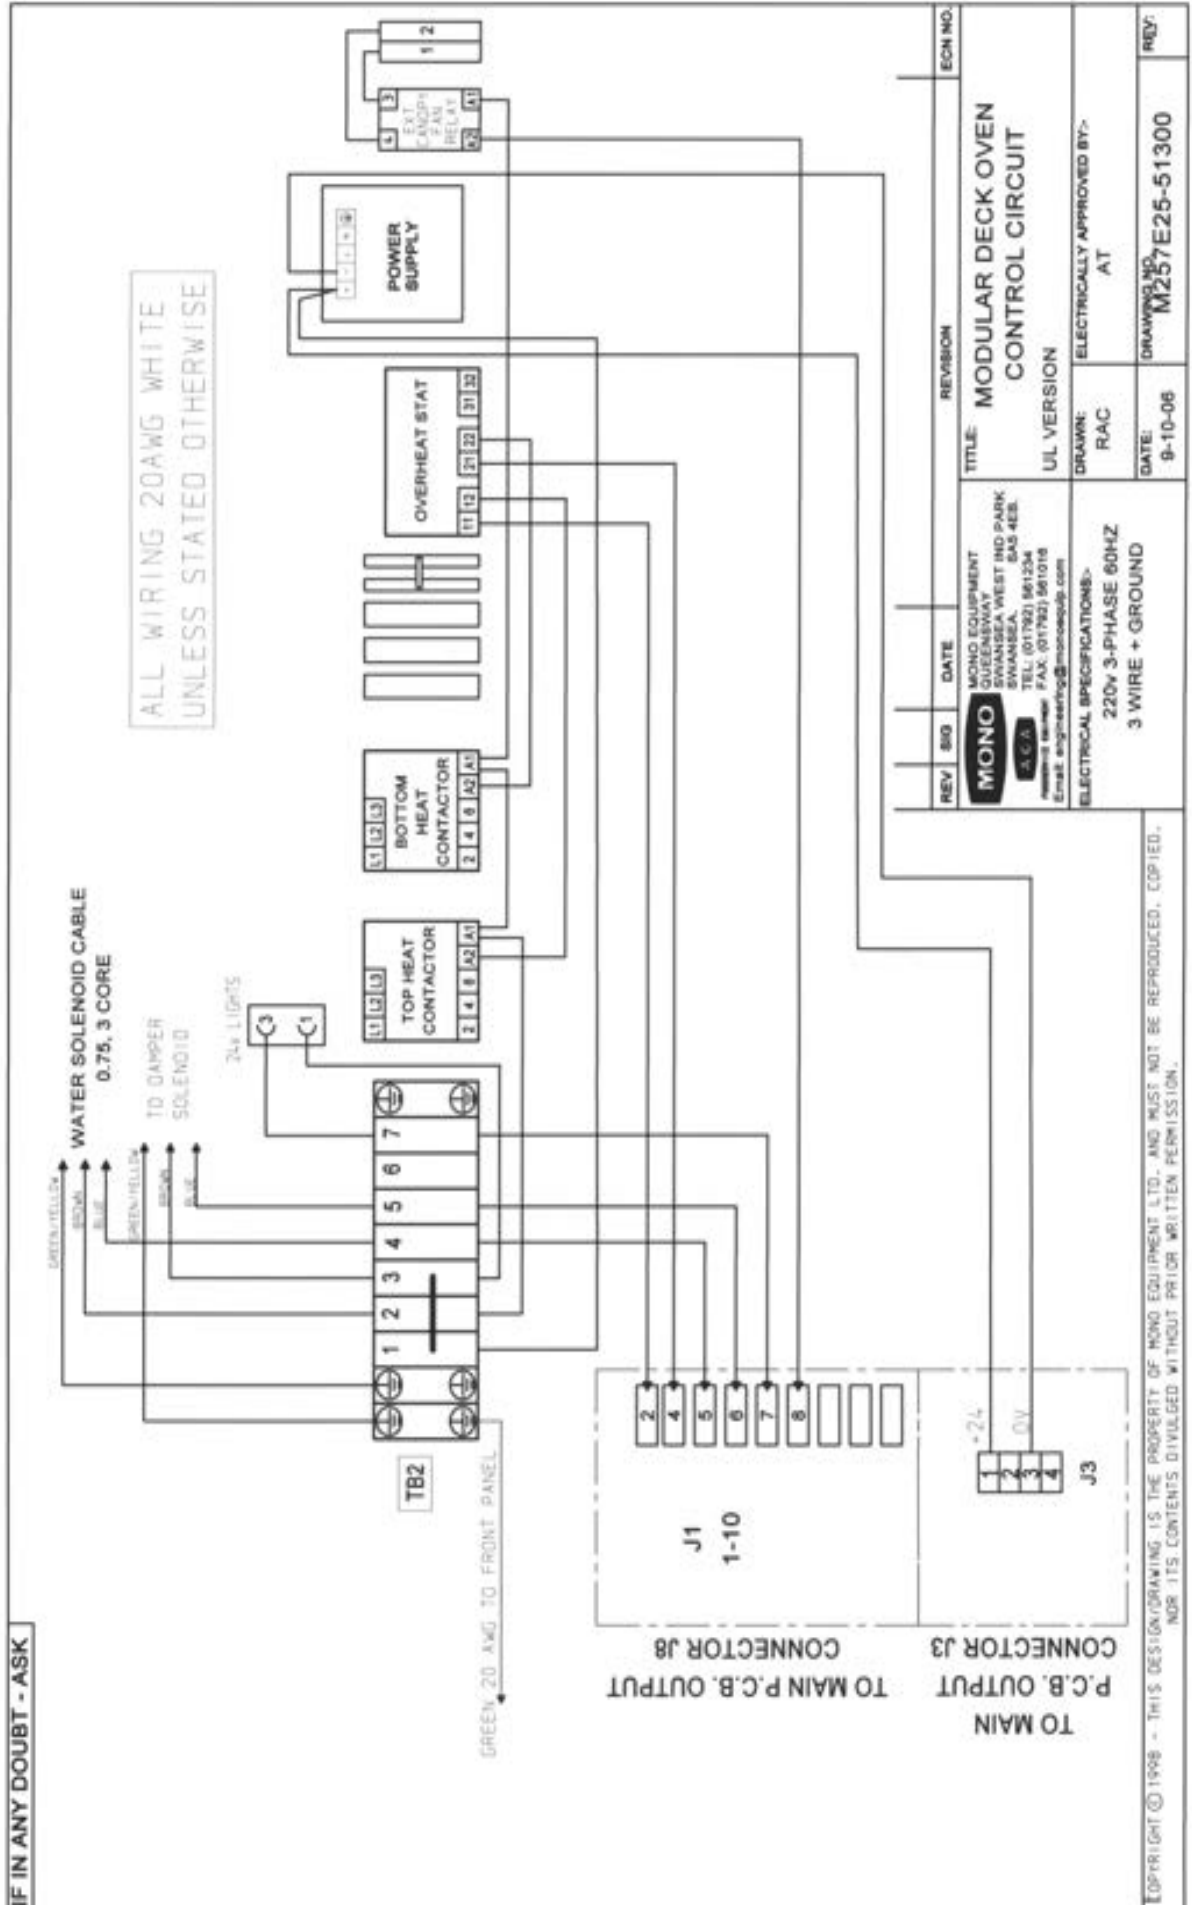


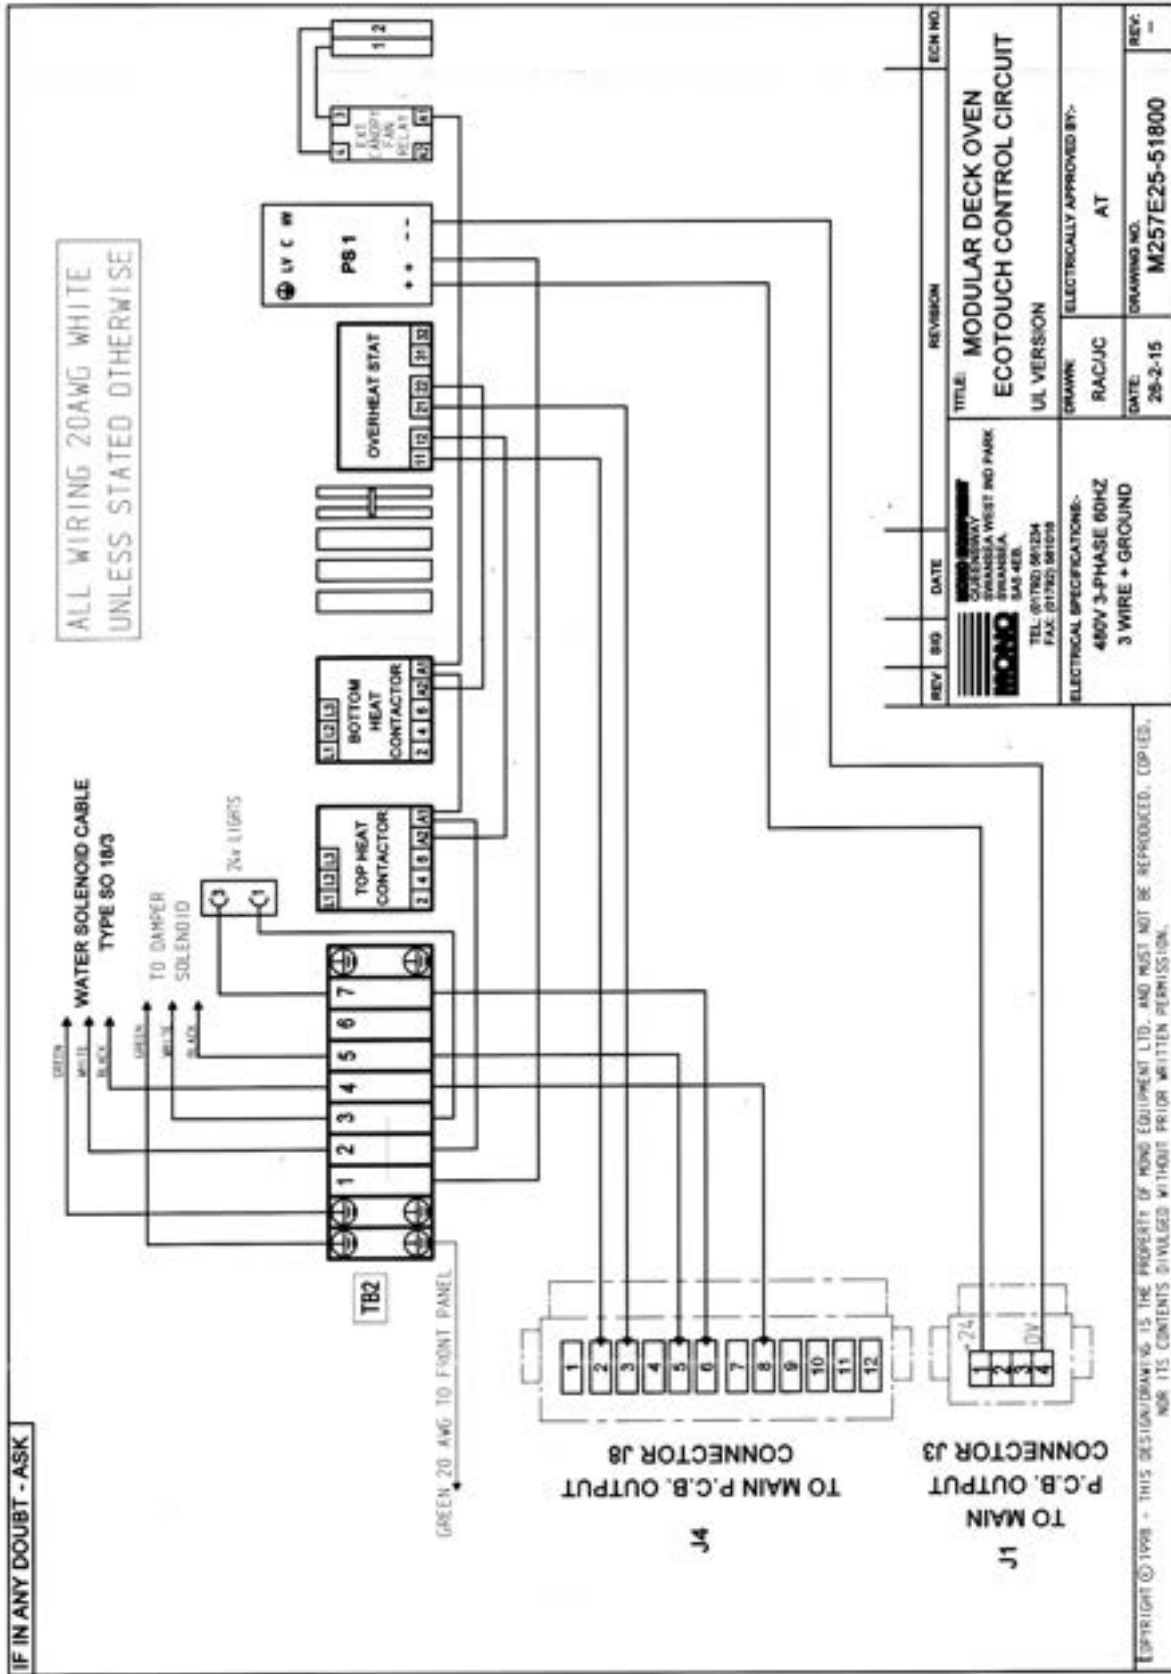

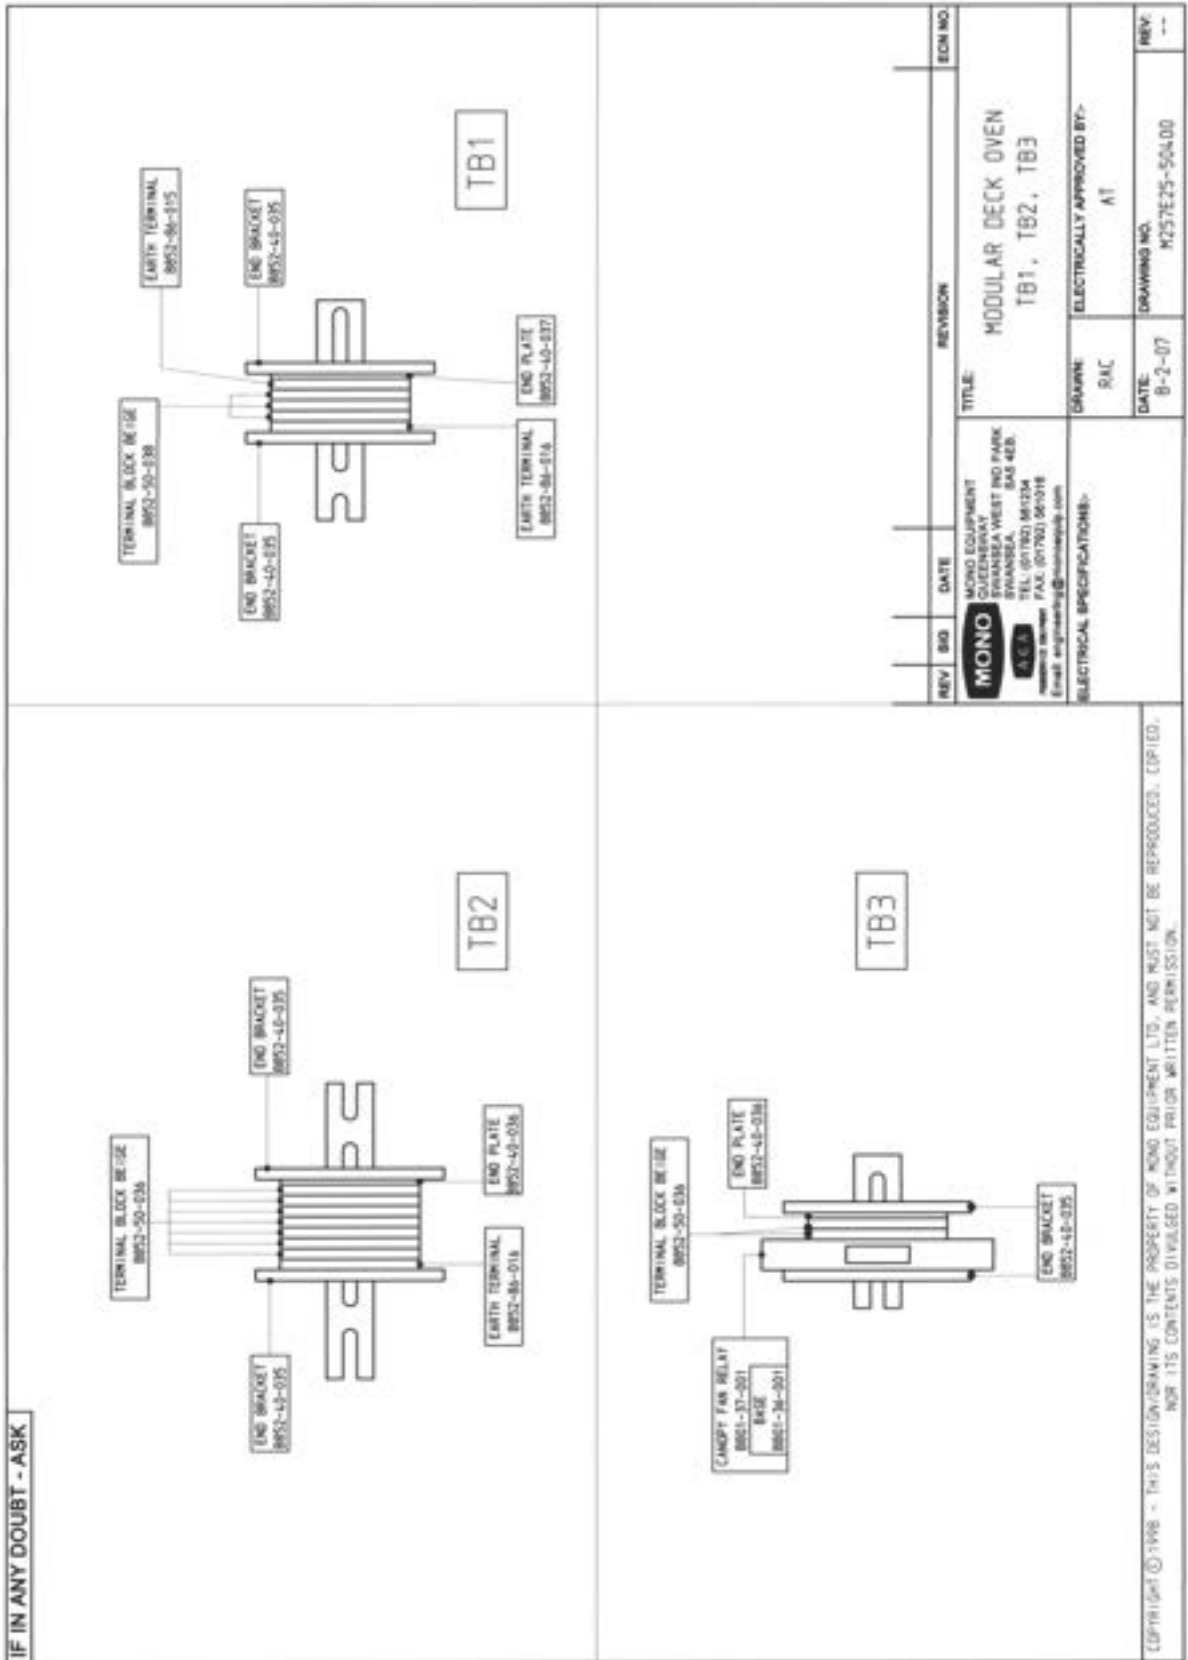


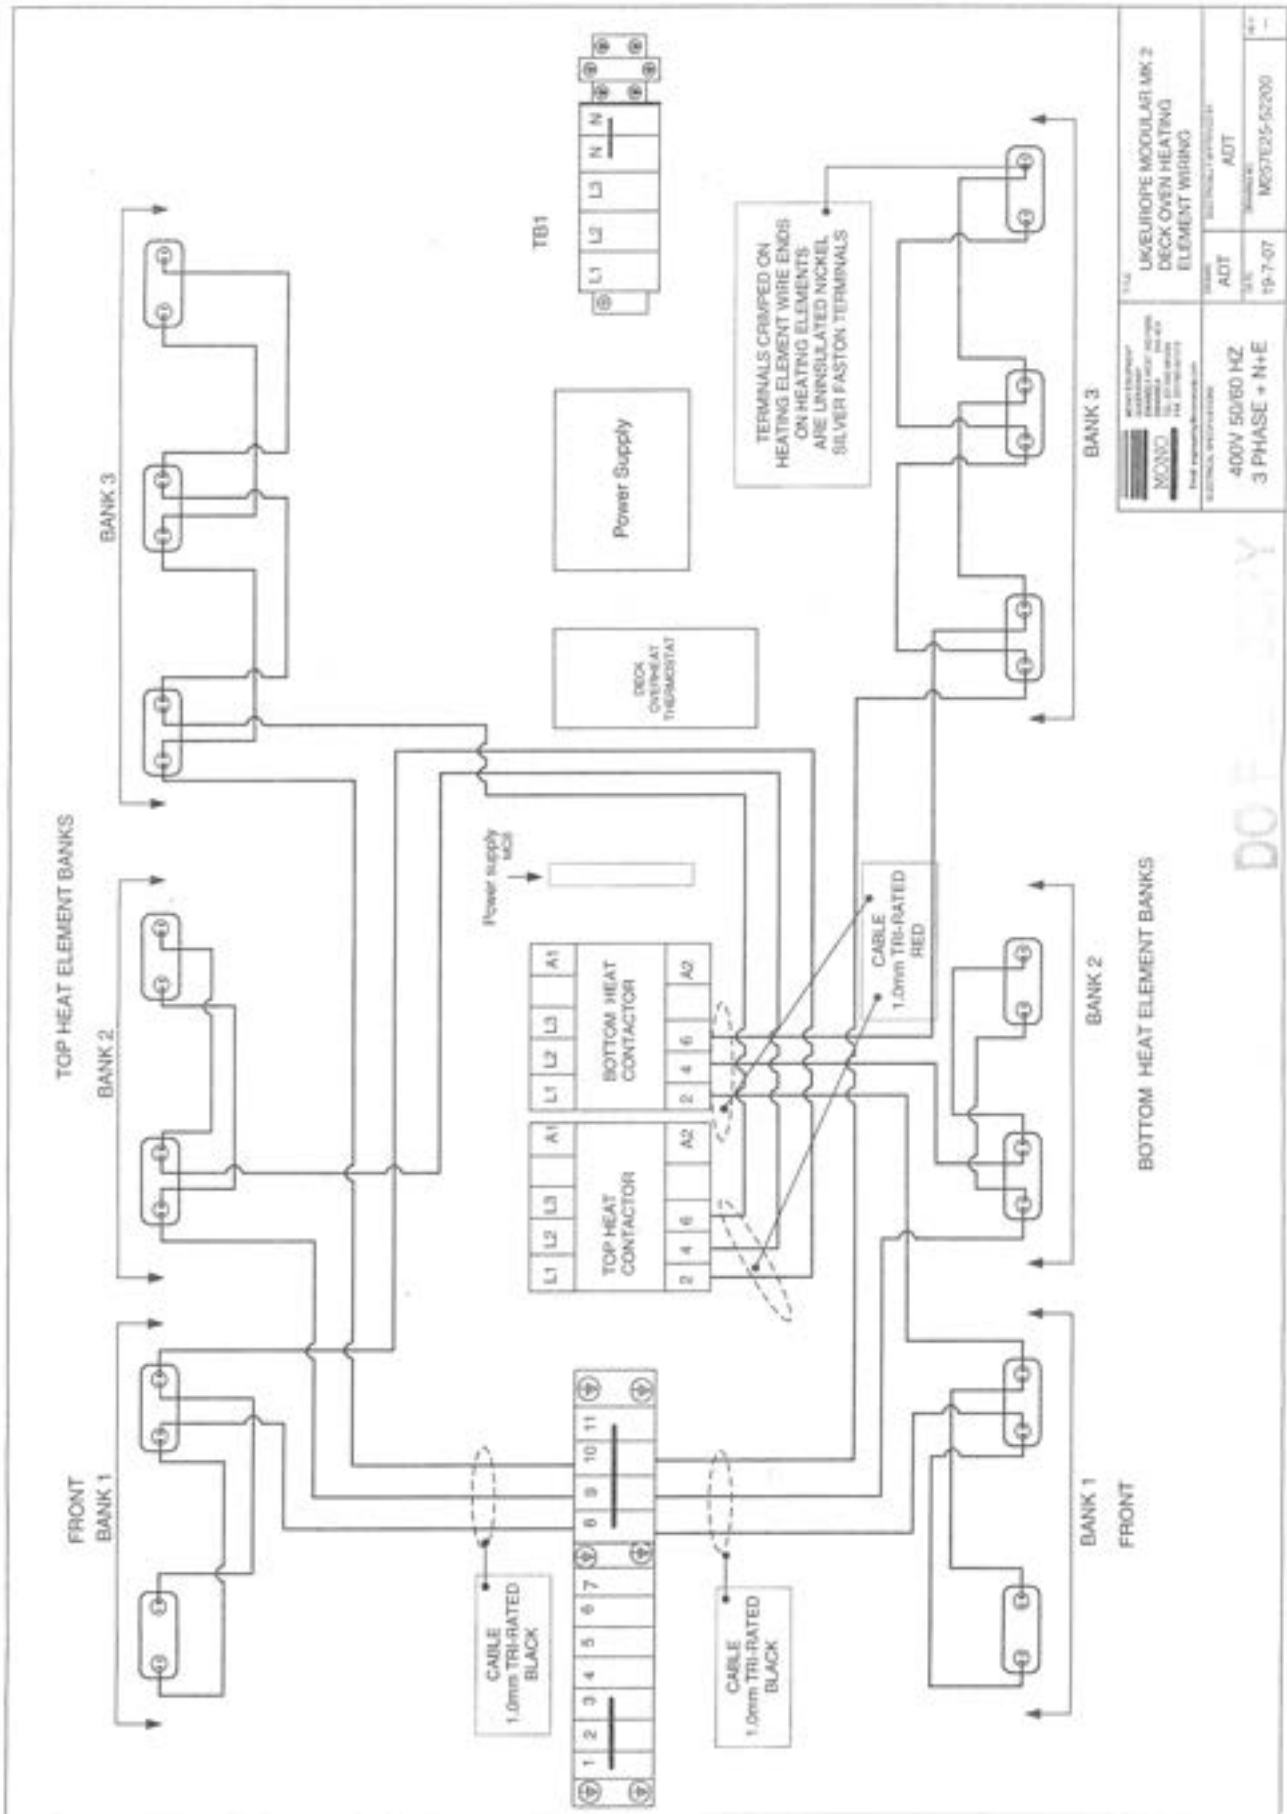

DOF

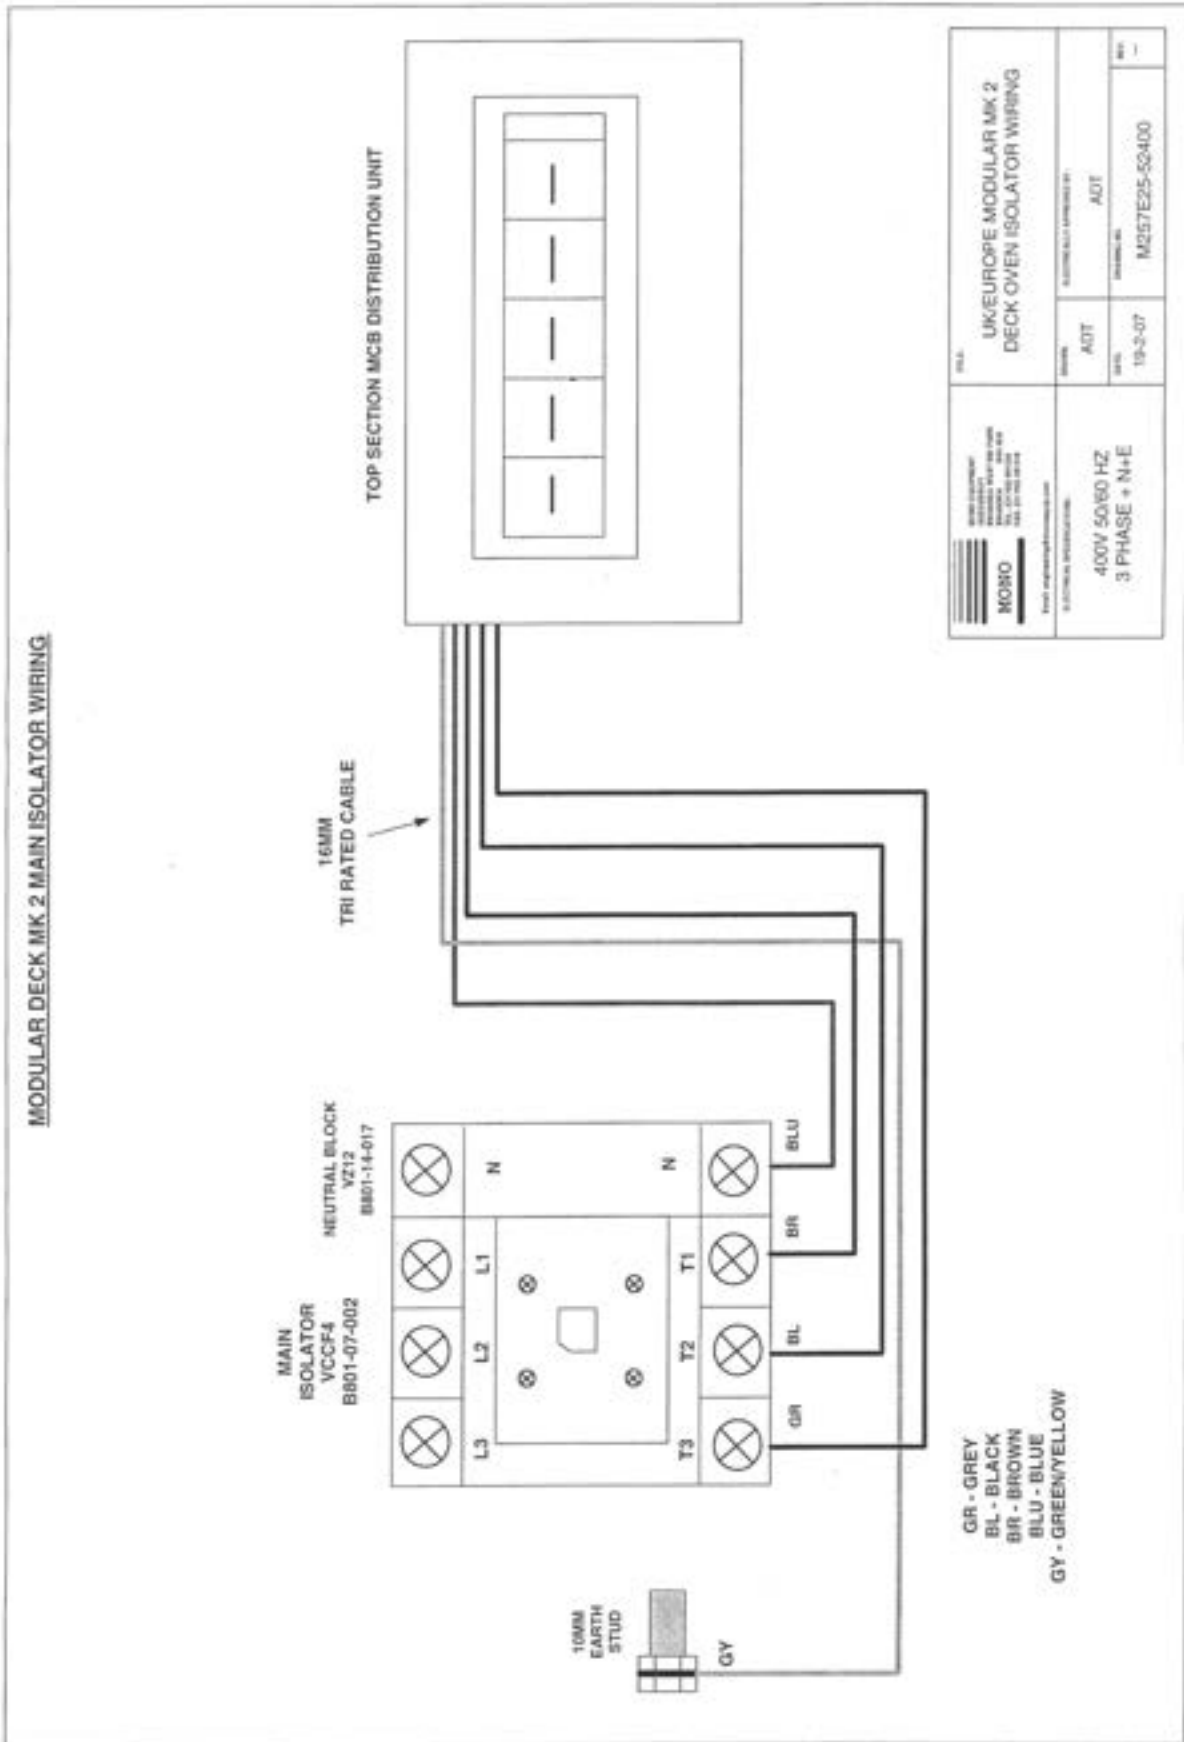

# Electrical panel main components

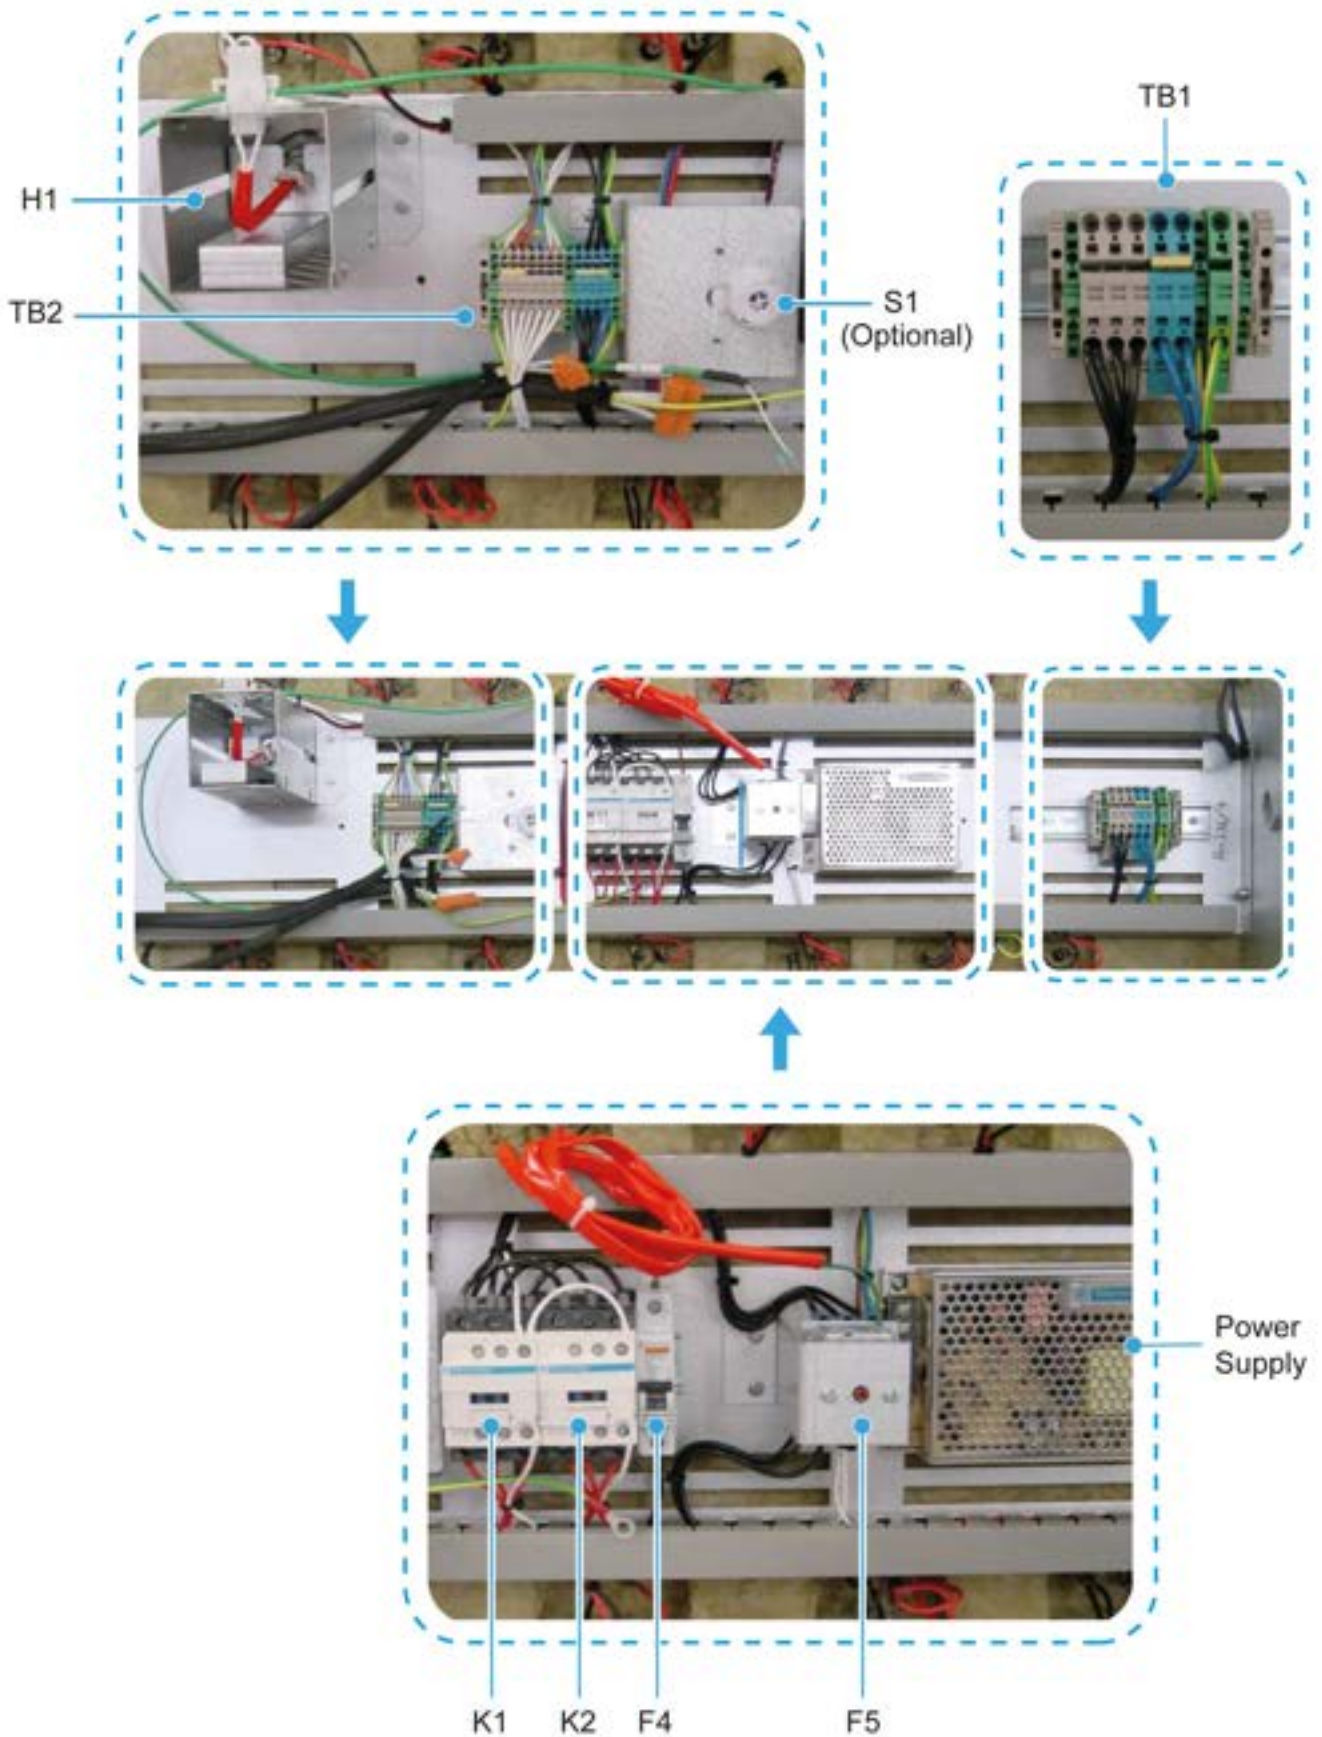




**Table 16:** Parts list for the oven canopy

| Reference | Part description   | Part number |
|-----------|--|-------------|
| C1        | Canopy fan capacitor, 5 $\mu$ F, 400VDB, metal             | B869-23-005 |
| Q1        | Canopy fan on/off switch                                   | B895-07-005 |
| M1        | Canopy fan motor R2E225-AG01-21 (230V, 1.4 Amp, 305 Watts) | B869-75-026 |
| X1        | Extraction fan socket connector                            | B831-06-006 |
|           | Extraction fan plug connector                              | B831-06-005 |
|           | Socket type 5669-C   | B831-06-006 |
|           | Socket type 5666-C   | B831-06-005 |
|           | MCB, 2 Pole, 1 Amp, "D"                                    | B872-22-117 |
|           | Capacitor, 4-6 uf, 400VDB, Metal                           | B869-23-005 |
|           | Fan type R2E225-AG01-21 (230V, 0.88 Amps, 200 W)           | B869-75-026 |

IF IN ANY DOUBT - ASK

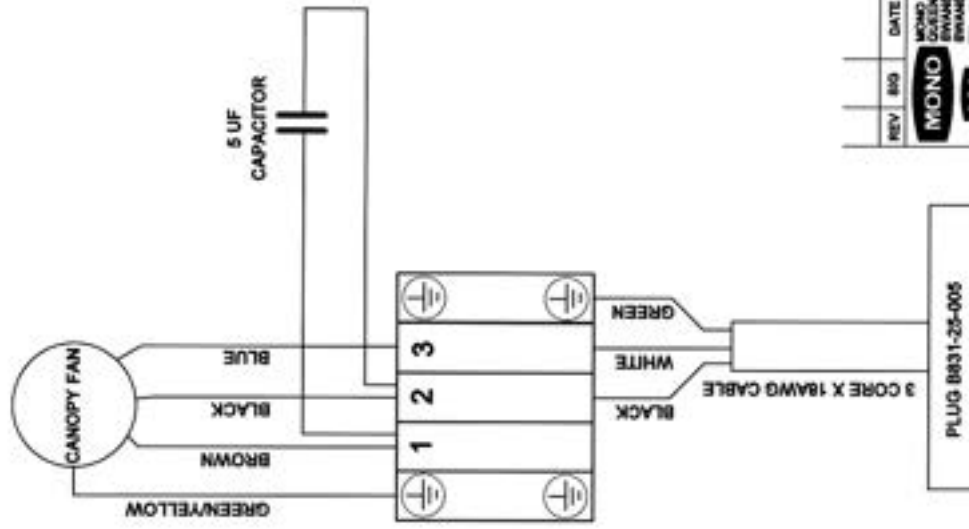


FROM CANOPY CONTROL PANEL

| REV  | NO | DATE | REVISION  | ECH NO. |
|--|----|------|---|---------|
|  |    |      | TITLE: MODULAR DECK OVEN<br>CANOPY FAN WIRING<br>UL VERSION |         |
| MONO EQUIPMENT<br>CALLENDER WEST RD PARK<br>SHARADA, INDIA 462018<br>TEL: (91782) 810204<br>FAX: (91782) 810018<br>Email: <a href="mailto:engineering@monoindia.com">engineering@monoindia.com</a> |    |      | DRAWN: RAC<br>ELECTRICALLY APPROVED BY: PBUAT               |         |
| ELECTRICAL SPECIFICATIONS  |    |      | DATE: 28-4-06   | REV: -  |
|  |    |      | DRAWING NO: M247E25-50800                                   |         |

COPYRIGHT © 1998 - THIS DRAWING IS THE PROPERTY OF MONO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.


IF IN ANY DOUBT - ASK

MCB 2 POLE 1.0A  
B672-22-117

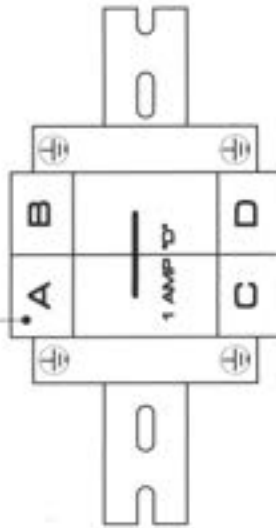


| REV   | ISS | DATE | REVISION  | ECN NO.  |
|---|-----|------|---|----------|
|   |     |      |   |          |
| <b>MONO</b><br>MONO EQUIPMENT<br>CLARENHAY<br>BUNNICK WEST RD PARK<br>BUNNICK, VA 22134<br>FAX: (817) 851-1334<br>Website: www.mono.com   AC: (817) 851-0198<br>Email: engineering@mono.com |     |      | TITLE: DXH CANOPY<br>CONTROL PLATE ASSY PARTS<br>UL |          |
| ELECTRICAL SPECIFICATIONS:-   |     |      | DRAWN: RAC<br>ELECTRICALLY APPROVED BY: AT          |          |
|   |     |      | DATE: 5-02-07<br>DRAWING NO. M257E-25-51200         | REV: --- |

COPYRIGHT © 1998 - THIS DESIGN/DRAWING IS THE PROPERTY OF MONO EQUIPMENT LTD. AND MUST NOT BE REPRODUCED, COPIED, NOR ITS CONTENTS DIVULGED WITHOUT PRIOR WRITTEN PERMISSION.

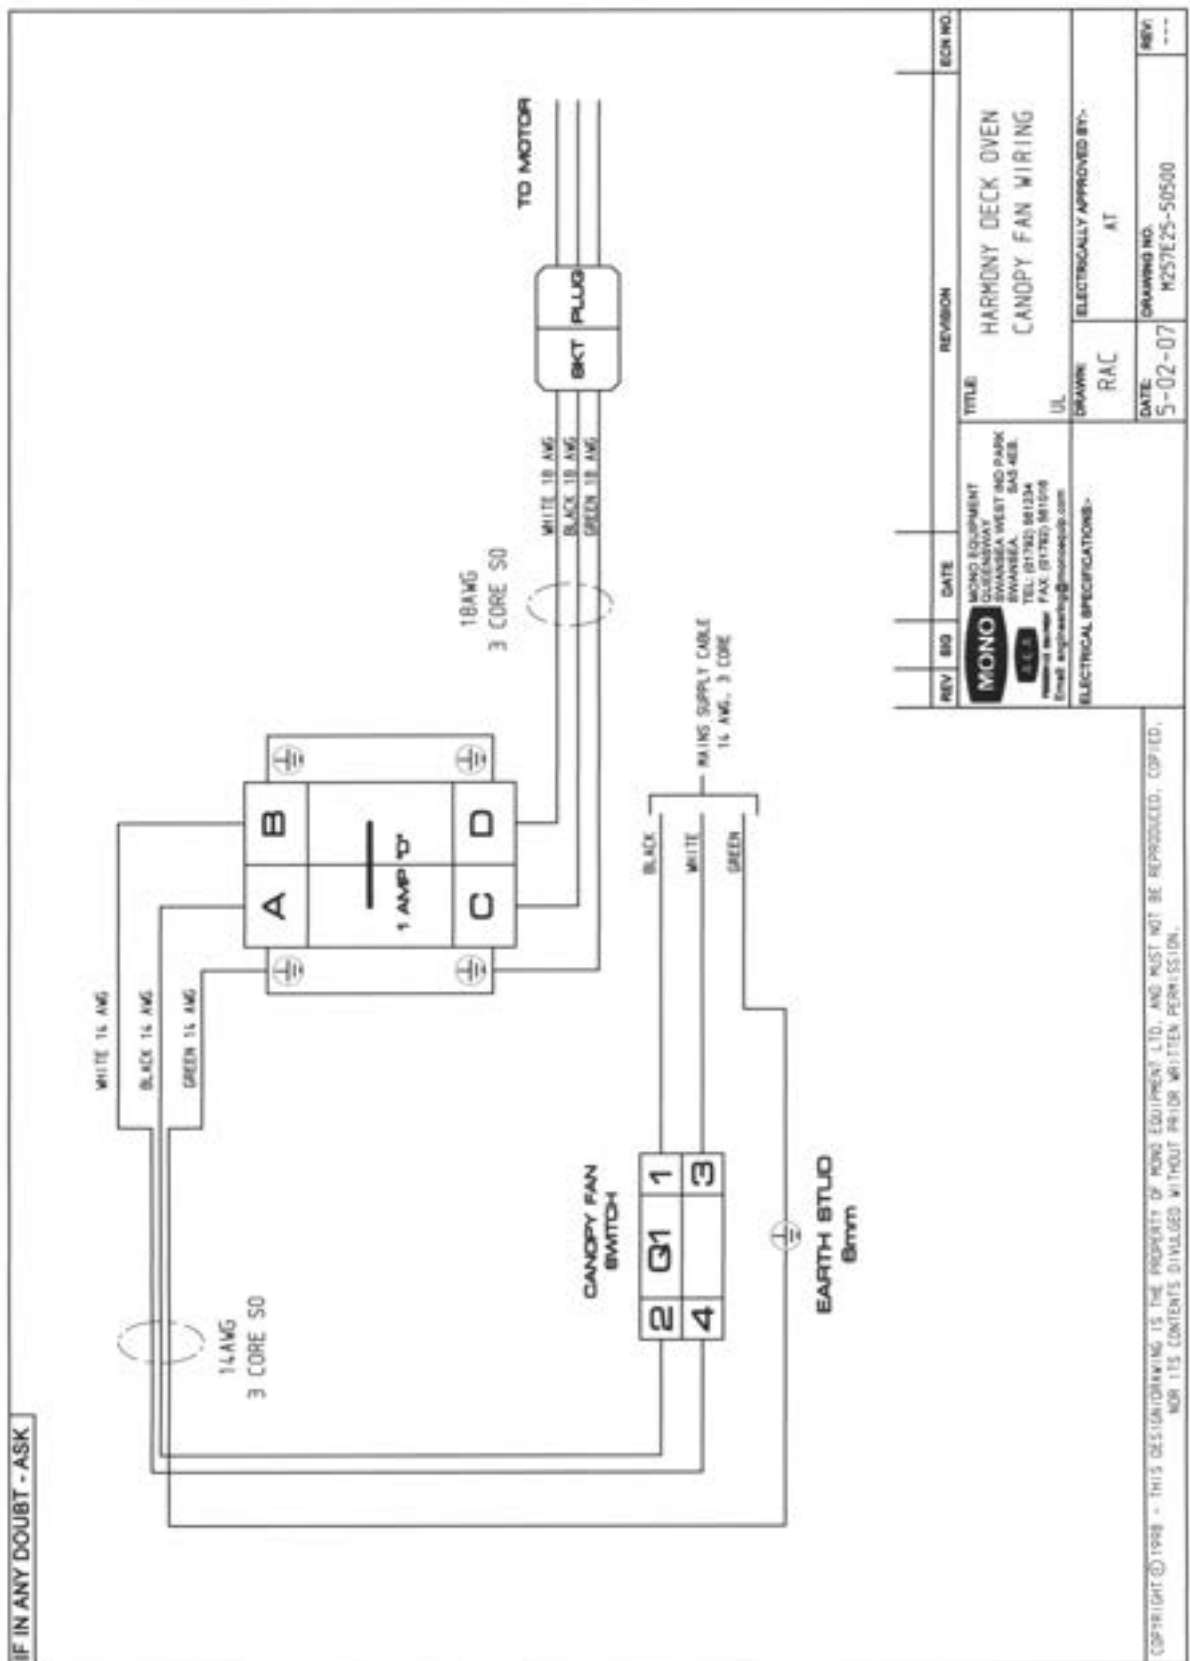

# 16. Location of Warnings and Information Labels

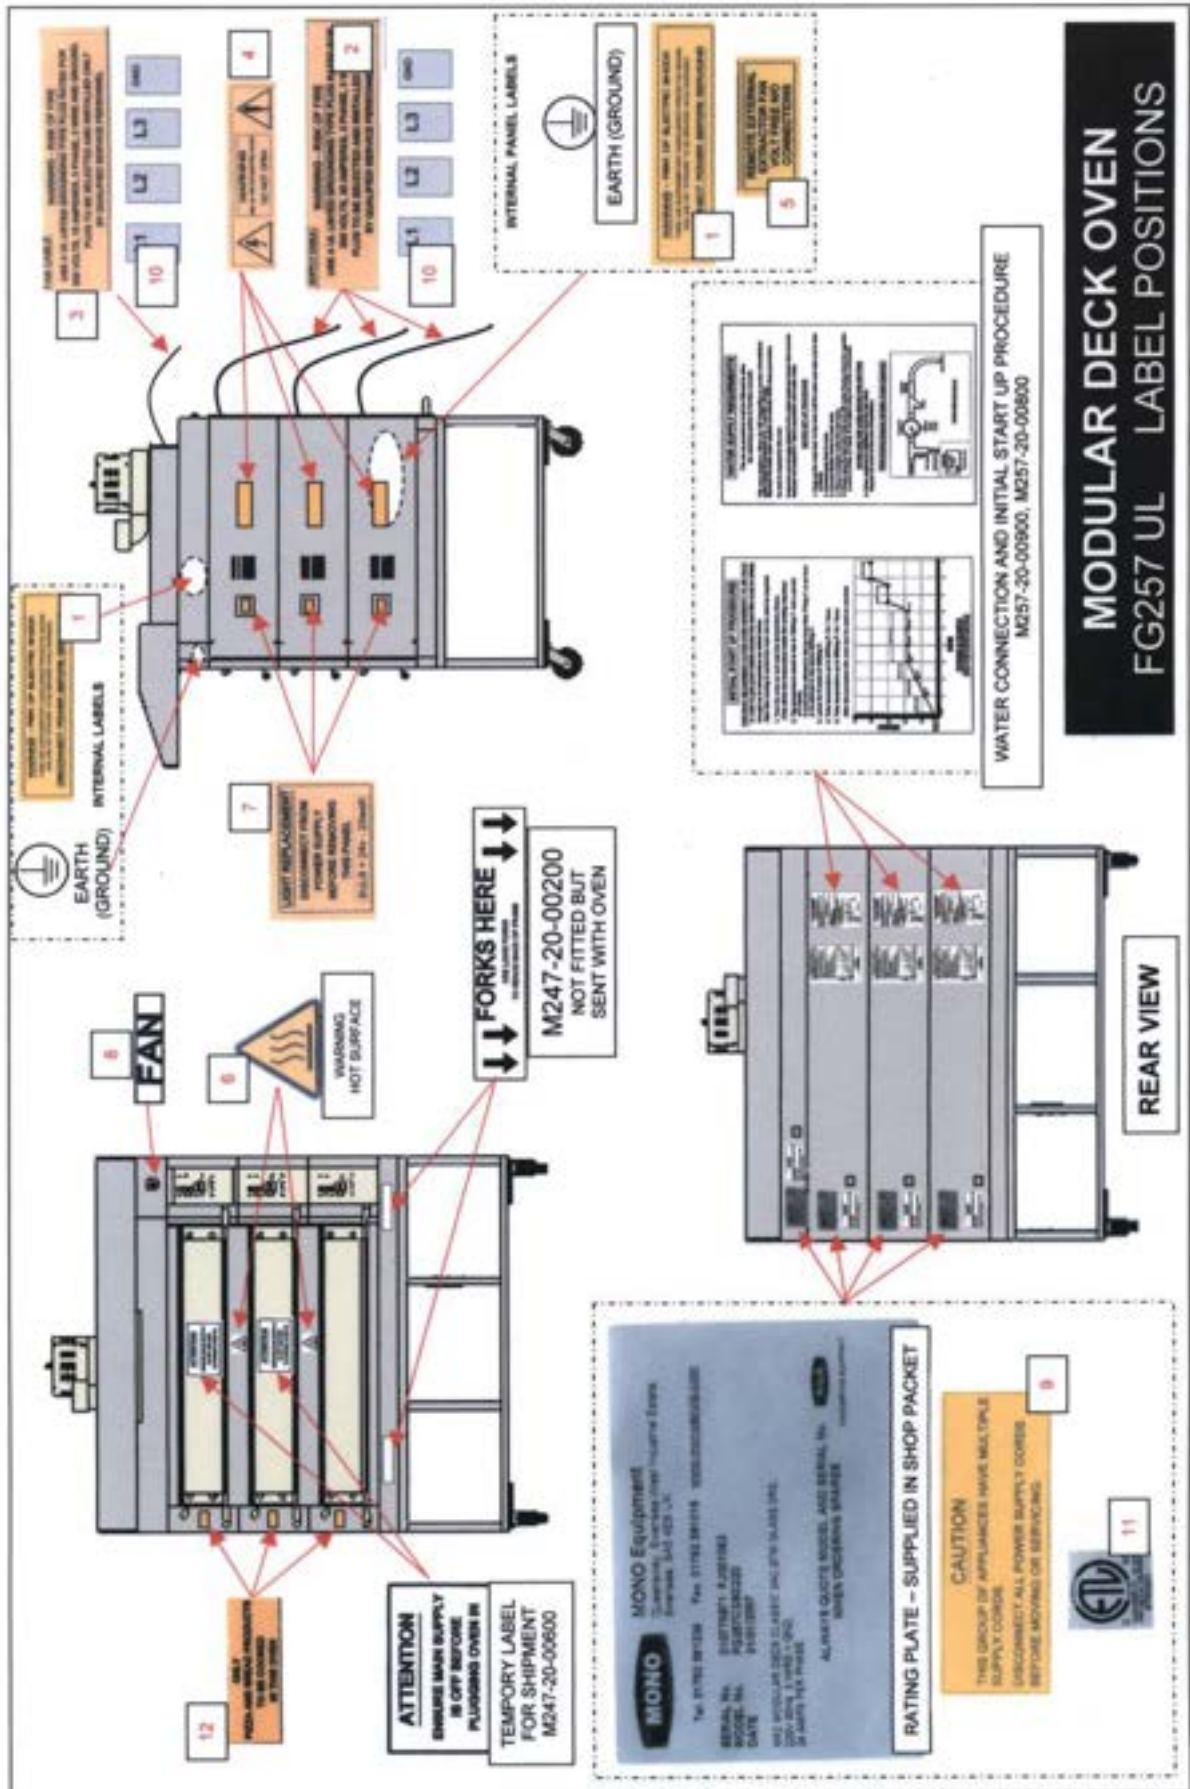

MONO Equipment is the leading designer and manufacturer of bakery equipment in the United Kingdom. This proud heritage of British craftsmanship, combined with a reputation for creating high-quality, innovative products, can be traced back to its origins in 1947.

All our bakery equipment is manufactured to the most stringent NQA ISO9001:2015 & NQA ISO14001:2015 standards and is crafted using the very latest, cutting-edge technology combined with the time-honoured skills of the master craftsman.

MONO Equipment truly excels in providing tailor-made solutions to a diverse range of clients, from the small independent artisan baker to the large retail chains found on every high street and in every out-of-town shopping centre. We can supply everything from a simple Food-2-Go cafe oven to the entire list of bakery equipment needed to set up a full scratch bakery.



**MONO Equipment Limited**

Queensway  
Swansea West Industrial Park Swansea  
SA5 4EB

Tel: +44 (0)1792 561 234 (Switchboard)  
Tel: +44 (0)1792 564 000 (UK Sales)  
Tel: +44 (0)1792 564 004 (International Sales)  
Tel: +44 (0)1792 564 048 / +44 (0)1792 564 049 (Spares)  
Fax: +44 (0)1792 561 016

Email: [sales@monoequip.com](mailto:sales@monoequip.com)  
Web: [www.monoequip.com](http://www.monoequip.com)



*Scan using your smart phone to  
view our website.*

